

OWNER'S MANUAL

Network Video Recorder

Please read this manual carefully before operating your set and retain it for future reference.

MODEL
LRN8240D Series



1

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

REGULATORY INFORMATION: FCC Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- A suitable conduit entries, knock-outs or glands shall be provided in the cable entries of this product in the end user.
- Caution: Danger of explosion if battery is incorrectly replaced. Replaced only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Holes in metal, through which insulated wires pass, shall have smooth well rounded surfaces or shall be provided with brushings.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Do not install this equipment in a confined space such as a bookcase or similar unit.

Warning: Wiring methods shall be in accordance with the National Electric Code, ANSI/NFPA 70.

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warning: To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.

Caution: This installation should be made by a qualified service person and should conform to all local codes.

Caution: To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Caution: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

Caution:

This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

To disconnect power from mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.



LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2011/65/EU.

Contact office for compliance of this product :

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

EEE Compliance with Directive. (for Turkey only)

Safety way to remove the battery or the battery from the equipment:

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Disposal of waste batteries/accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Safety warnings and Cautions

The following are warnings and cautions for the safety of the users and for the prevention of any property damage. Please read the following carefully.

WARNING

- Turn off the system before installation. Do not plug in several electric devices to the same outlet.
 - This may cause heating, fire, or electric shock.
- Do not place any liquid container on the system, such as water, coffee, or other beverage.
 - If liquid is poured onto the system, it can cause a system breakdown or fire.
- Prevent the power cable from being severely bent or having pressure exerted on it by a heavy object.
 - This may cause fire.
- Clean the dust around the system on a regular basis. When cleaning the system, always use a dry cloth. Do not use a wet cloth or other organic solvents.
 - This may damage the surface of the system and can cause a system breakdown or electric shock.
- Avoid any place with moisture, dust, or soot.
 - This can cause fire or electric shock.
- When pulling the power cable from the plug, do so gently. Do not touch the plug with wet hands and avoid using the plug if the holes in the outlet are too loose.
 - This may cause fire or electric shock.
- Do not attempt to disassemble, repair, or modify the system on your own. It is extremely dangerous due to the high voltage running through the system.
 - This may cause fire, electric shock, or serious injury.
- Check for any danger signs such as a moist floor, a loosened or damaged power cable, or an unstable surface. If you encounter any problems, ask your dealer for assistance.
 - This may cause fire or electric shock.
- Keep a distance of at least 15 cm between the back of the system and the wall for the cables connected to the system otherwise, they may be bent, damaged, or cut.
 - This may cause fire, electric shock, or injury.
- Install the system in a cool place without direct sunlight and always maintain room temperature. Avoid candlelight and heat generating devices such as heaters. Keep the system away from places where many people pass.
 - This may cause fire.
- Install the system on a plain surface with sufficient air ventilation. Do not place the system on an elevated surface.
 - This may cause system breakdown or serious injury.
- The power outlet must be placed on the ground, and the voltage range must be within 10 % of the voltage rate. Do not use the same outlet with a hair dryer, iron, refrigerator, or any heating appliances.
 - This may cause fire, over heating or electric shock.
- When the system's battery is depleted, replace it with the same or equivalent type of battery specified by the manufacturer. Depleted batteries should be discarded according to the manufacturer's instructions.
 - This may cause an explosion.
- If the system's HDD exceeds its life span, you may not be able to recover any data stored inside the HDD. If the video on the system screen appears 'damaged' while playing a recording stored inside the system's HDD, it must be replaced with a new one. Ask for an engineer's assistance for HDD replacement from your dealer.
 - LG Electronics is not responsible for deleted data caused by user mishandling.
- PLEASE DO NOT MOUNT OR UN-MOUNT HDDs WHILE SYSTEM IS POWERED ON.
 - This may cause system breakdown.

CAUTION

Please beware of the following precautions before installing the system.

- Avoid positioning the product in any place where the unit may come into contact with moisture, dust, or soot.
- Avoid placing in direct sunlight or near heating appliances.
- Keep the product away from electric sparks or magnetic substances.
- Do not place any conductive material through the ventilation grills.
- Keep the system turned off before installation.
- Ensure enough space is left for cable connections.
- Place the system on a solid surface with sufficient air ventilation. Avoid any surface that vibrates.
- Placing the system near electronic devices such as a radio or a TV may cause the product to breakdown.
- Do not disassemble the product without seeking assistance from LG Electronics.
- Do not place any heavy object on the system.
- Prevent any substances from being inserted into the system.
 - This may cause system breakdown.
- Install the system in a place with sufficient air ventilation.
 - Keep at least 15 cm distance between the back of the system and the wall, and at least 5 cm distance between the side of the system and the wall.
- Do not install the system in a place with high magnetic, electric wave, or wireless devices such as a radio or a TV.
 - Do not install the system in a place with magnetic objects, electric frequencies, or vibration.
- Do not place any heavy object on the system.
 - This may cause system breakdown.
- Install the system on a stable, level surface.
 - The system may not operate properly.
- Install the system in a place with appropriate moisture and temperature levels.
 - Avoid installing the system in a place with high (over 40 °C) or low (under 0 °C) temperature.
- The system can be damaged from a strong impact or vibration. Avoid throwing objects within the vicinity of the system.
- Avoid direct sunlight or any heating appliances.
 - Recommended operating temperature is over 0 °C (32 °F).
- Ventilate the air inside the system operation room, and tighten the system cover firmly.
 - System breakdown may be caused by an inappropriate environment. It is recommended to use AVR (Automatic Voltage Regulator) for a stable power supply. It is recommended to coil the core-ferrite around the connector of the system to avoid electromagnetic interference.
- The outlet must be placed on the ground.
- If there is strange sound or smell, unplug the power cable immediately and contact the service center.
 - This may cause fire or electric shock.
- In order to maintain stable system performance, have your system checked regularly by the service center.
 - LG Electronics is not held responsible for system breakdown caused by user mishandling.
 - There is a risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Do not overturn the product during use.

Contents

1

Safety Information

- 3 IMPORTANT SAFETY INSTRUCTIONS

2

Preparation

- 8 Introduction
 - 8 Features
 - 8 Accessories
- 9 Front Panel
- 11 Rear Panel
- 12 Remote Control

3

Installation

- 13 Connections
 - 13 Precautions
 - 13 Basic Connection Overview
 - 14 Connecting Display device
 - 14 Connecting Audio device
 - 15 Connecting USB device
 - 15 Connecting E-SATA device
 - 15 Connecting Network
 - 16 Connecting LKD1000 Controller
 - 17 Connecting Alarm Input and Alarm Output
- 18 HDD INSTALLATION
 - 18 Note for Hard Disk Drive
 - 18 Installing the Hard Disk Drive
 - 18 Replacing the Hard Disk Drive
 - 18 Recommended HDD
- 19 System Operation
- 19 System Shutdown
- 19 General Explanation of the Live

Screen on the Main Monitor

- 19 Main Monitor Screen
- 20 Moving the Channel's Position
- 20 Selecting the Split mode
- 21 Grouping channel
- 21 PTZ Camera Control
- 22 Using the Digital Zoom function
- 23 Export the recorded data
- 24 Viewing the System Log List
- 24 Viewing System Information
- 25 Configuration menu
- 26 System settings
 - 26 Properties
 - 26 TCP/IP v4
 - 26 TCP/IP v6
 - 27 Network
 - 27 Network Streaming
 - 27 Date/Time
 - 28 NTP
 - 28 Controller
 - 28 Update
 - 29 Backup
- 30 Device settings
 - 30 IP Device
 - 32 Storage
- 33 Display settings
 - 33 OSD
 - 33 Sequence
- 33 Record settings
 - 33 Normal Schedule Recording
 - 33 To Set a Recording Schedule for a Typical Day of the Week (Normal Schedule)
 - 35 To Set a Recording Schedule for a Special Day (Special Schedule)
 - 35 Copying the Recording Schedule
 - 35 Sensor
 - 35 Motion
- 36 Event settings
 - 36 Sensor
 - 36 Notification
 - 36 Mail
 - 37 Emergency

37	SNMP	51	Factory Default Configuration Settings
37	Output	57	IP Live/Playback Specifications
37	Buzzer	57	Specifications
38	User settings		
38	Group Authority		
38	User		
39	Setup Wizard settings		
39	Step 1		
39	Step 2		
39	Step 3		
40	Step 4		

4

Operation

41	Instant Recording
41	Panic Recording
42	Instant Playback
42	Search and Playback
42	Date and Time Search
42	Event Search
43	Bookmark/Protect Search
43	Export Search
44	Functions Available During Playback
45	Using the playback control menu
45	Using the Protect function

5

Troubleshooting

6

Appendix

48	Recommended Devices
48	Recommended USB Memory list
48	Recommended External Device list
48	Recommended CD/DVD Media list
49	Supported function list for device
49	Supported IP Camera Audio/Video Codec
50	Time zones

1

2

3

4

5

6

2

Preparation




 




Introduction

Model LRN8240D (24 Channel) is used for the description, operation and details provided in this operating guide.


Features

- Stable embedded Linux operating system.
- Journal filing system for HDD file recovery following power recovery.
- Internal storage expandable to 12 TB. (Expandable if new high capacity HDD is launched)
- Easy operation using various user interface & user friendly GUI.
 - Optical mouse, Full function IR remote controller
- Powerful multiplex function.
 - Simultaneous live display, recording, playback, network transmission, back-up.
- Various search function.
 - Date/time search (calendar search), Event search, Bookmark/Protect search, Export search.
- Pre-alarm recording (Up to 1 minute).
- Powerful record scheduling.
- Instant playback in live mode.
- Perfect audio/video synchronization.
- Automatic backup by schedule.
- Image authentication (Watermark).
- Three USB 2.0 ports for backup interface.
- Setup configuration export/import with USB memory stick.
- Easy system S/W update with USB memory stick or network.
- Clients S/W can manage max 300 servers.
- Max five clients can access one server simultaneously.
- Network bandwidth throttle.
 - Automatically adjust a bandwidth according to network speed status of unit.
- Remote alarm notification via client software or E-mail.
- Time and date sync from NTP server.
- Daylight saving mode.
- Covert camera protection.
- Support Gigabit Ethernet.
- E-SATA storage interface.
- Two-way audio.
- User management (User level control).
- PTZ Control.
 - IP camera telemetry control (OSD control).

Accessories

CD (Software and Owner's Manual)		Screws	
Mouse		Rack Mount Bracket	
Remote Control		Power Plug	
AAA type batteries		Simple Manual	

Front Panel

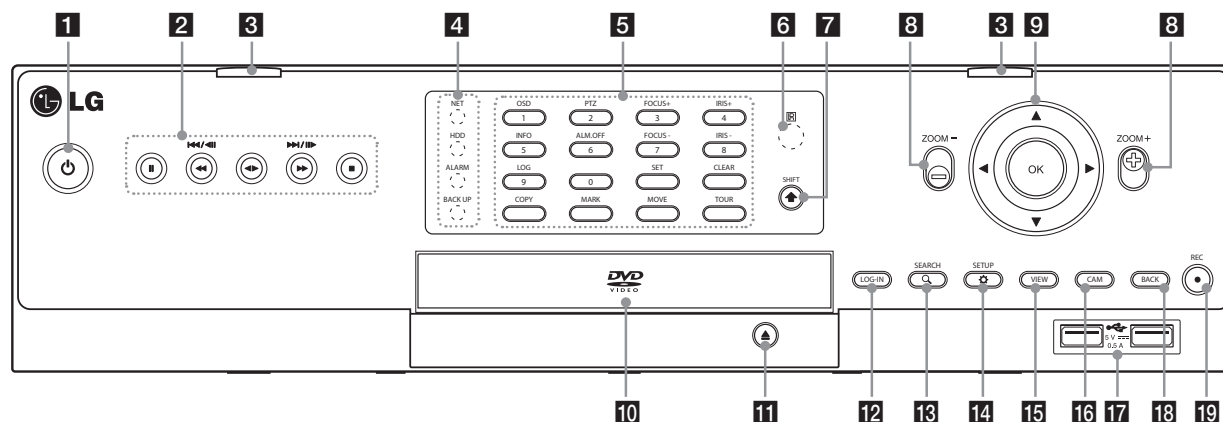


- 1** (Power): Turns on or off. Press and hold for more than 2 seconds to turn on or off.
- 2** Playback Control Buttons
 - **II**: Pauses playback.
 - **◀◀, ◀◀◀/◀◀II**: Searches the recorded images in reverse or skips the recorded images.
 - **▶▶**: Playback or reverse playback of recorded images.
 - **▶▶, ▶▶▶/▶▶II**: Forward searches the recorded images or skips the recorded images.
 - **■**: Stops playback.
- 3** Front panel release button : Press these buttons to separate the front panel for HDD installation.
- 4** Indicator
 - **NET**: Blinks when the network is connected.
 - **HDD**: Lights when the HDD is accessed.
 - **ALARM**: Lights when the alarm out is in progress.
 - **BACK UP**: Lights when the data back up is in progress.
- 5** Channel Buttons: You can input a number with channel buttons. You can also use the channel buttons for sub-function with SHIFT button. (When you select the channel number over the 10, press tens digit and units place in order and then click **OK** button.) You should press the OK button after input the channel number when you select the applicable channel.

- Sub-functions

Button number	Function	Description
1	OSD	Accesses or minimizes the System Control Bar (OSD).
2	PTZ	Switches this unit to PTZ mode to control the connected PTZ camera.
3/7	FOCUS - / FOCUS +	Adjusts focus position.
4/8	IRIS - / IRIS +	Adjust iris position.
5	INFO	Displays the system information.
6	ALM.OFF	Cancels alarm activation and returns the system to the condition before the alarm was activated.
9	LOG	Displays the System Log List.
11	SET	Registers the PTZ camera's preset position.
12	CLEAR	Deletes a memorized preset position.
13	COPY	Displays the export menu.
14	MARK	Sets the mark point for recording search.
15	MOVE	Moves the camera to the preset position.
16	TOUR	Tours all registered preset positions in the camera.


- 6** Remote Sensor: Point the remote control here.
- 7** SHIFT button: If you use the Sub-function of the channel button, the button is activated.
- 8** ZOOM + / -: Zooms in/out on playback window.
- 9** Arrow and OK Buttons
 - ▲▼◀▶: Select or move between the menu options.
 - OK: Confirms menu selections.
- 10** Disc Tray: Insert a disc here.
- 11** OPEN: Opens or closes the disc tray.
- 12** LOG-IN: Displays the User Log-In dialog box or logs out.
- 13** SEARCH: Displays the search menu.
- 14** SETUP: Displays the setup menu.
- 15** VIEW: Displays the split mode menu.
- 16** CAM: Displays the Monitor menu to set the first camera channel.
- 17** USB Port: Connects an external USB device for backup or playback.
- 18** BACK: Exits the menu or returns to the previous screen.
- 19** REC: Starts or stops instant recording.

Rear Panel

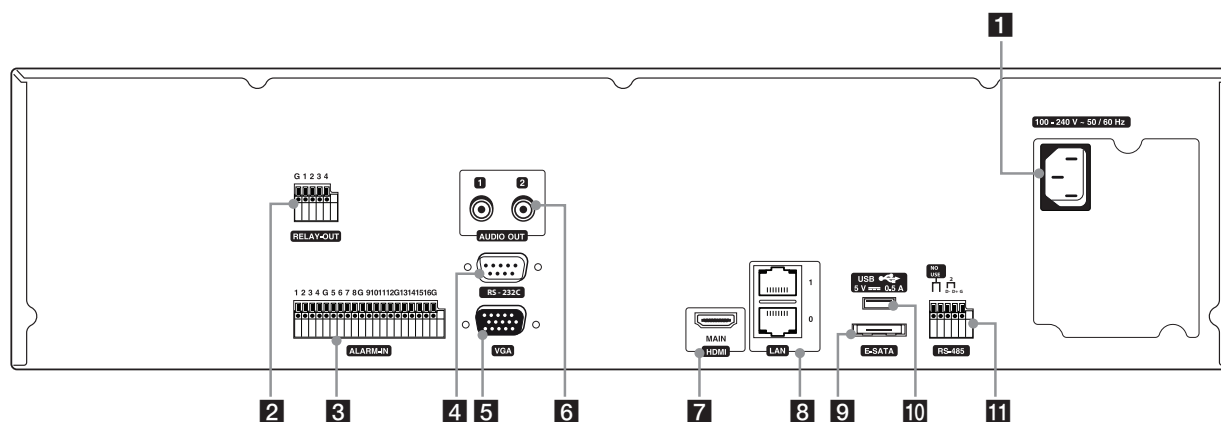

- 1** Power Cord Inlet (AC IN): Connect the power plug.
- 2** RELAY-OUT Terminals: Output terminals for alarm (relay) signal.
- 3** ALARM-IN Terminals: Input terminals for alarm (relay) signal.
- 4** RS-232: Used to connect to a host device equipped with RS-232C connector.
- 5** VGA: Connect a VGA monitor.
- 6** AUDIO OUT 1 / 2: Connect to an active speaker with a built-in amplifier.
- 7** HDMI: Connect to monitor or display device with HDMI inputs. (Interface for digital audio and video)
- 8** LAN Ports: Connect the ethernet 10/100/1000 Mbps network cable for controlling this unit via a PC network.
- 9** E-SATA: Connect the external SATA device.
- 10** USB Port: Connect an optional extension USB device.
- 11** RS-485 Terminals: Connect LKD1000. (Port 2 only)

Remote Control

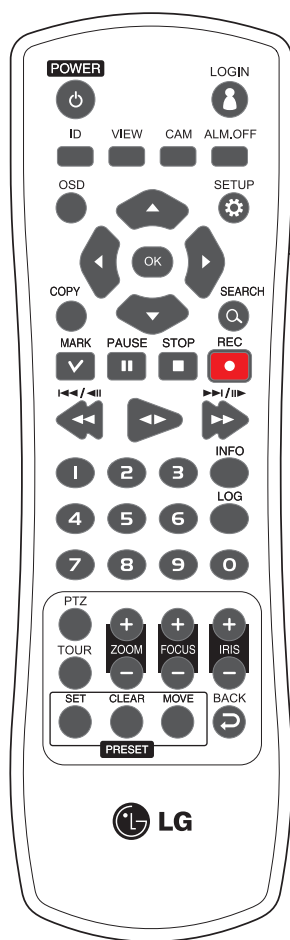

Button	Description
POWER (⏻)	Turns system on or off.
LOGIN	Displays the User Log-In dialog box or logs out.
ID	Set the appropriate system ID to operate via the IR Remote Controller when using the multiple system. Press the ID button then press the number button within 2 seconds to select the system ID of the system. If you set the system ID to "0", you can control multiple system at the same time.
VIEW	Displays the split mode menu.
CAM	Displays the Monitor menu to set the first camera channel.
ALM.OFF	Cancels alarm activation and returns the system to the condition before the alarm was activated.
OSD	Accesses or minimizes the system control bar.
SETUP	Displays the setup menu.
▲▼◀▶	Selects or moves between the menu options.
OK	Confirms menu selections.
COPY	Copies the recording data to an external device.
SEARCH	Displays the search menu.
MARK	Sets the mark point for recording search. You can set the mark point during the single or multi channel playback of recorded data.
PAUSE (⏸)	Pauses playback.
STOP (■)	Stops playback.
REC (●)	Starts or stops recording.
◀◀, I◀◀ / ◀◀	Searches the recorded images in reverse or skips the recorded images.
◀◀	Playback or reverse playback of recorded images.
▶▶, ▶▶I / ▶▶	Forward searches the recorded images or skips the recorded images.
Number Buttons	Selects the PTZ preset number, ID or channel.
INFO	Displays the system information window.
LOG	Displays the System Log List window.
PTZ	Switches this unit to PTZ mode to control the connected PTZ camera.
TOUR	Tours all registered preset positions in the camera.
ZOOM + / -	Zooms in/out on the playback window. If you press ZOOM(+) button during viewing a live channel in full screen mode or playing back a channel in full screen mode, the digital zoom function is activated.
FOCUS + / -	Adjusts the focus of a camera.
IRIS + / -	Adjusts the iris of a camera.
SET	Registers the PTZ camera's preset positions.
CLEAR	Deletes a memorized preset position.
MOVE	Moves the camera to the preset position.
BACK	Exits the menu or returns to the previous screen.

3


Installation

Connections

Precautions

- Depending on the camera and other equipment there are various ways to connect the unit. Please refer to the camera manual or manuals for other devices as necessary for additional connection information.
- Be sure to switch off the camera before installation and connection.

Basic Connection Overview

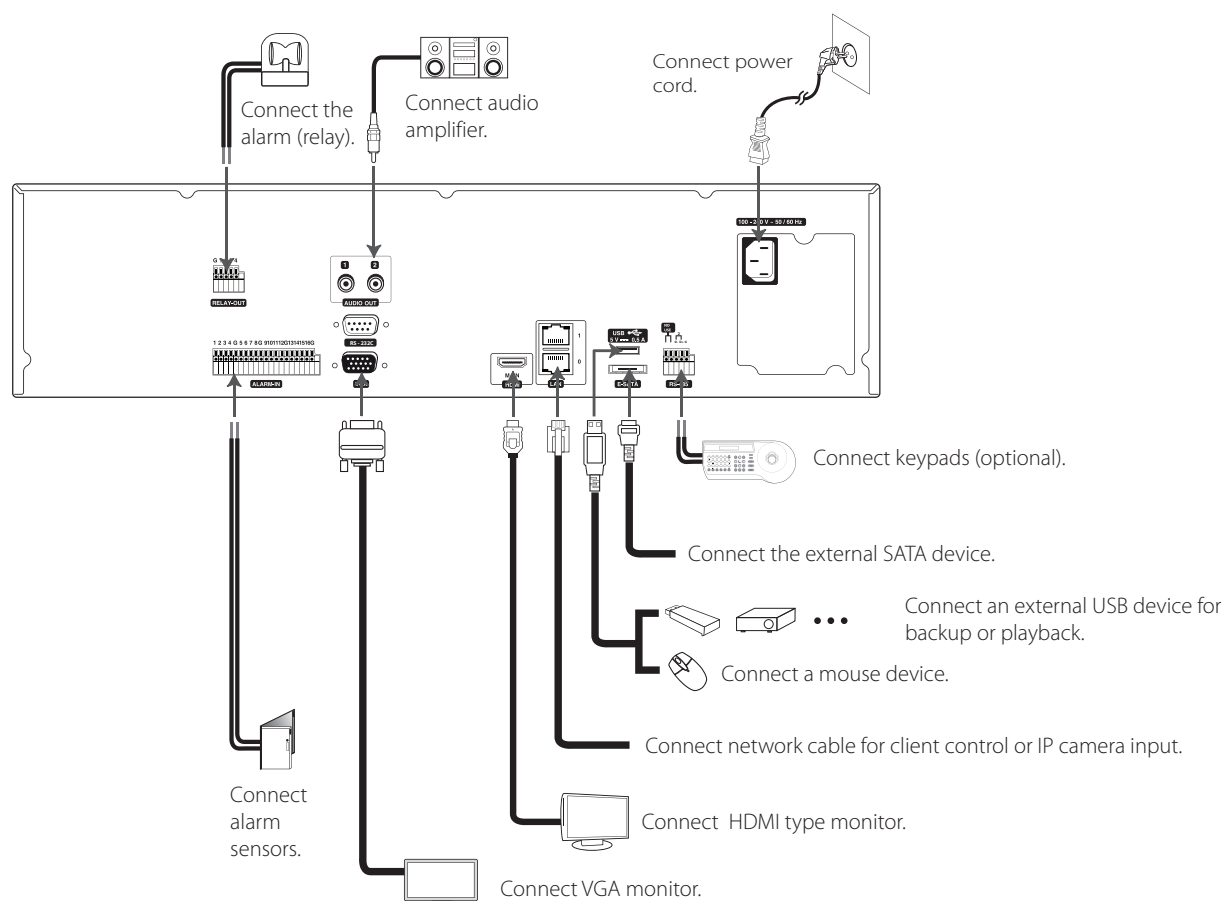


Connecting Display device

This unit can be output simultaneously from the HDMI and VGA jack. The video signal connects between the system and the monitor.


VGA Monitor connection

Connect the VGA jacks on the rear of the unit to the corresponding input jacks on the TV or monitor using the VGA cable.

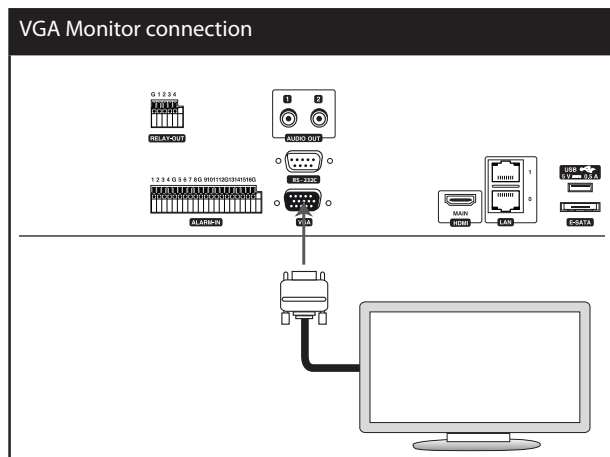

HDMI Monitor connection


Connect the unit to the HDMI monitor using a HDMI cable (Type A, High Speed HDMI™ Cable).

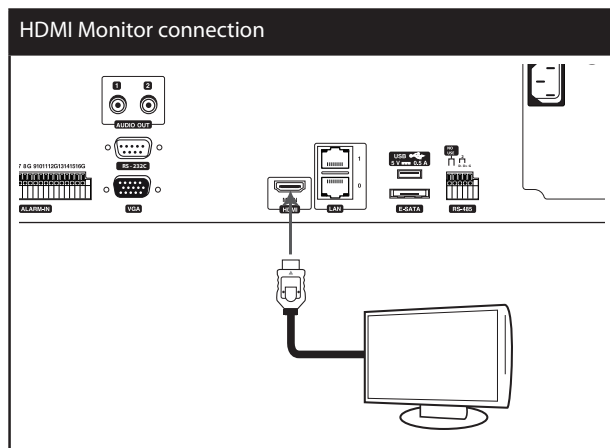


Connecting Audio device

Connect the AUDIO OUT jacks on the unit to the mono audio in jacks on your audio device.

Microphone and Speaker connection

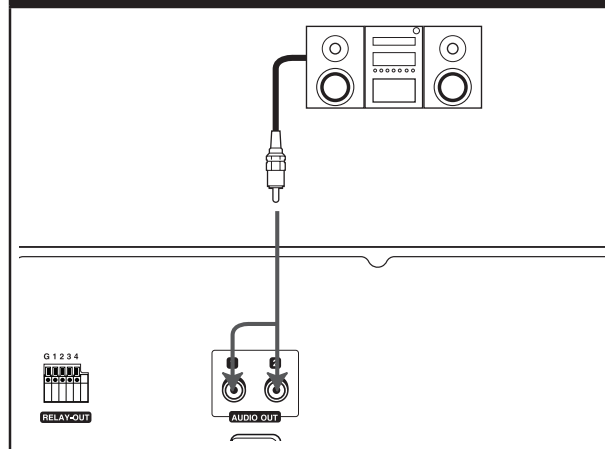

Connecting USB device

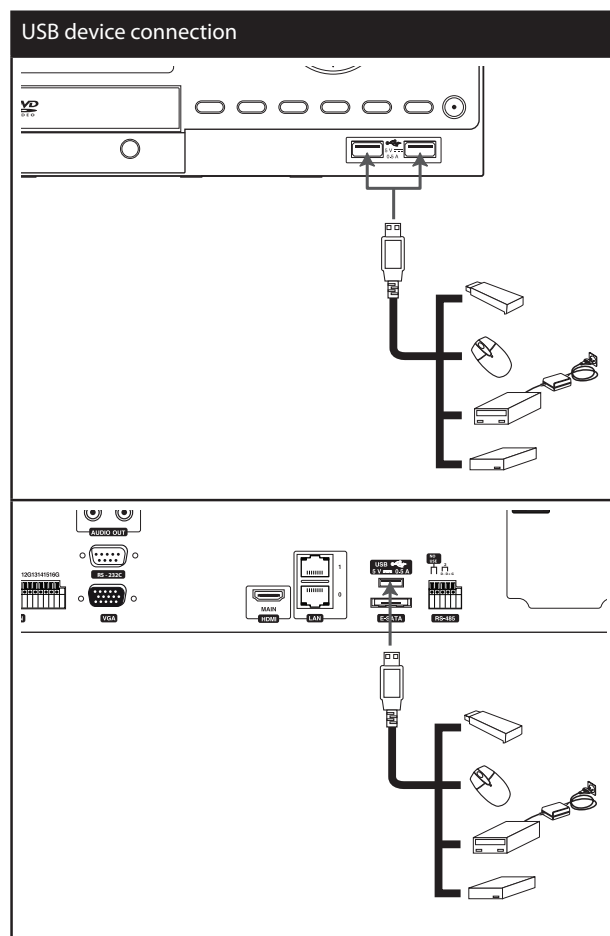

USB Memory device

Insert the memory device into the USB port. The system automatically recognizes the device. The system software can be easily upgraded using a USB memory device.

USB External device


Connect the external device to the USB port.
(Example: External HDD or other external storage.)

Mouse

Connect the USB mouse to operate the system.


Connecting E-SATA device

You can use E-SATA storage for data back-up or recording.

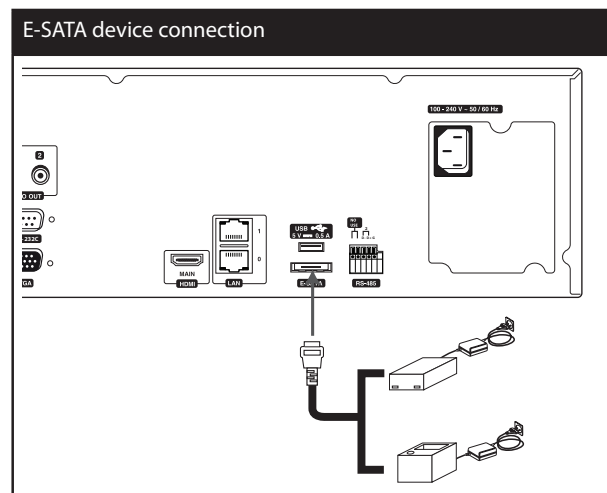

Connecting Network

You can control and monitor the system via network. With the remote control (monitoring), you can change the system configuration or monitor the image via network. After the installation, check the network settings for the remote control and monitoring work.

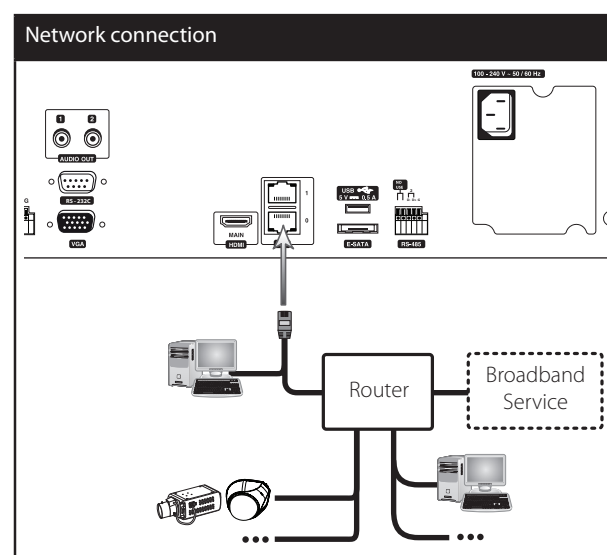

LAN connection

Connect the LAN port to an available 10/100/1000 base-T port with a straight ethernet cable (not supplied). The NET indicator on the front panel will be lit.

IP Camera connection

Connect the IP camera. After the installation, check the IP camera settings on the setup menu.

Automatic network configuration

The system can automatically obtain and configure the network interface via DHCP.

Manually configure network

The system may be manually configured by assigning an IP address, subnet mask, gateway and DNS.



NOTE

This unit can be supported IPv4 and IPv6 network.


Connecting LKD1000 Controller

This system has a data terminal. Use this port2 to connect keypads (optional).

RS-485 Terminal	Description
D - (DATA -)	Data Transmission/Reception
D + (DATA +)	Data Transmission/Reception
GND	Shield

Connect the LKD1000 controller to control the system. (Refer to the manuals of the LKD1000 controller for more details.) The LKD1000 controller has to be connected to the 2 (DATA 2) port as shown illustration. If you connect the LKD1000 controller to the 1 (DATA 1) port, the LKD1000 controller will not be activated.

LKD1000 controller connection

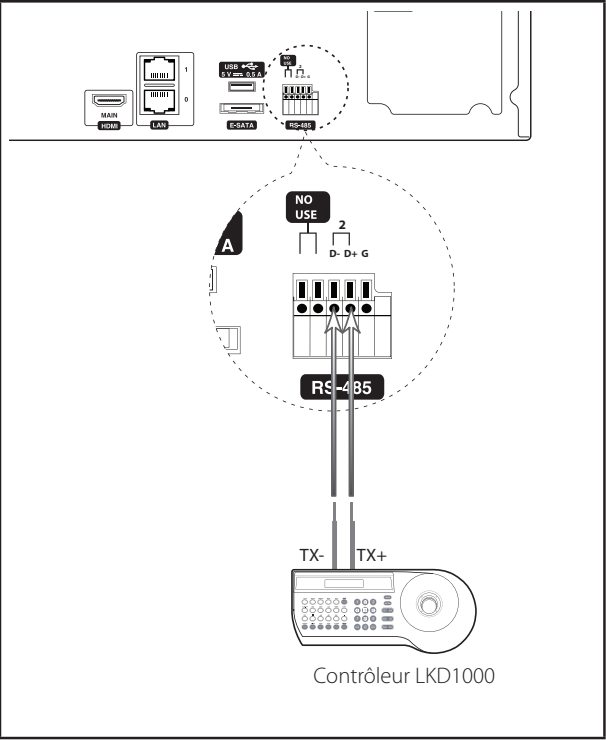


Connecting Alarm Input and Alarm Output

Alarm terminals are used to connect the alarm devices such as sensors, door switches, etc.

Alarm Input

You can connect up to 16 alarm sensors. Each alarm sensor should be connected with G (GND). The signal state is adjustable to N/O (Normal Open) or N/C (Normal Close) through the setup menu.

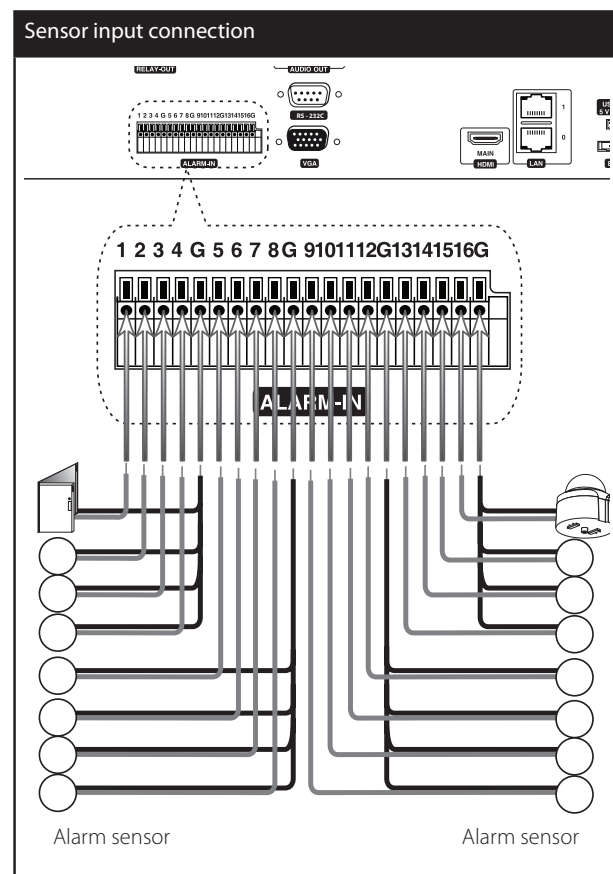


Terminal No.	Description
1	Sensor Input 1
2	Sensor Input 2
3	Sensor Input 3
4	Sensor Input 4
G	Ground
5	Sensor Input 5
6	Sensor Input 6
7	Sensor Input 7
8	Sensor Input 8
G	Ground
9	Sensor Input 9
10	Sensor Input 10
11	Sensor Input 11

12	Sensor Input 12
G	Ground
13	Sensor Input 13
14	Sensor Input 14
15	Sensor Input 15
16	Sensor Input 16
G	Ground

Alarm Output

Connect the alarm device to the alarm output. Alarm signal outputs when an event occur.

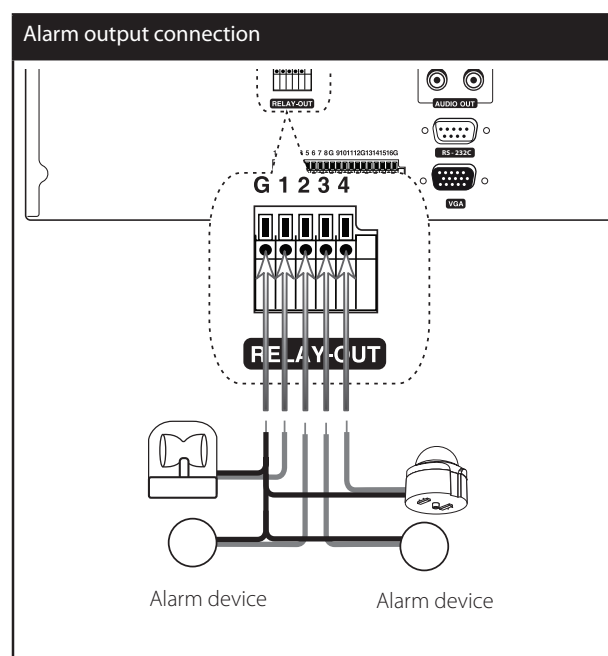

Terminal No.	Description
G	Ground
1	Alarm Output 1
2	Alarm Output 2
3	Alarm Output 3
4	Alarm Output 4



NOTE

The internal switching relays are rated for 0.3 A at 125 V AC or 1 A at 30 V DC. If the electric current is higher than that the unit can be damaged.

HDD INSTALLATION

Note for Hard Disk Drive

The internal hard disk drive (HDD) is a fragile piece of equipment. Please follow the guidelines below when using the system to protect against possible HDD failure. We recommend that you back up your important recordings onto an external backup device in order to prevent accidental loss.

Make sure that the power is turned OFF when attaching or removing the HDD.

- Do not move the system while the power is on.
- Do not use the system in excessively hot or humid places, or in places that may be subject to sudden changes in temperature. Sudden changes in temperature can cause condensation to form inside the system. This can be a cause of HDD failure.
- While the system is switched on, do not unplug from the wall socket or switch the electricity off from the breaker switch.
- If there's a power failure while the system is on, some data on the HDD may be lost.
- Do not drop the HDD. Also do not put the metallic object such as coins or screwdrivers into the HDD tray.
- When a power failure occurs during recording, avoid adding, replacing or transporting the HDD as the recorded data may be erased. In this case, turn the power back on to boot up the unit normally with the HDD that was being used at the time of the power failure attached. Then add, replace, or transport the HDD.
- The HDD is very delicate. Handle the HDD with care and follow the precautions below because even a tiny shock may damage the internal components of the HDD.
 - Do not place the HDD on the desk or table directly. Put a thick cushion under the HDD because even a small shock may damage the internal components of the HDD.
 - Do not use an electric screwdriver. Vibrations and shocks caused by an electric screwdriver may damage the internal components of the HDD.
 - When replacing the HDD, do not knock the HDD with other components such as another HDD and the HDD tray.
 - Do not knock the HDD with tools such as a driver when replacing the HDD.
- Protect the hard disk drives from static electricity.

Installing the Hard Disk Drive

You can install up to 6 HDDs.

Improper installation or setup may disturb HDD recognition or normal product operation. So you should consult with an expert from the store where the product was purchased.

1. Disassemble the front panel by pressing the release button on the front panel.
2. Loosen the screws and detach the hard disk mounting brackets from the units.
3. Attach the HDD onto the hard disk mounting brackets with four screws.
4. Attach the hard disk mounting brackets with the screws.
5. Close the front panel by hanging the bottom hook after push the Front panel release button.

6. When you turn the power of the unit on, the new HDD is detected and formatted automatically.



CAUTION

You should install the hard disk drive from 1 to 6 in order.

Replacing the Hard Disk Drive

Turn the power of the unit off and detach the power plug from the outlet.

1. Disassemble the front panel by pressing the release button on the front panel.
2. Loosen the screws and detach the hard disk mounting brackets from the units.
3. Replace the new HDD.
4. Close the front panel by hanging the bottom hook after push the Front panel release button.
5. After replacing the hard disk drive, insert the power plug into the outlet and turn the power of the unit on. The new HDD is detected and formatted.



NOTE

Do not use an electric screwdriver to fix them.

Recommended HDD


For the latest recommended HDD list, please visit <http://www.lgecommercial.com>



NOTE

If you do not use the recommended HDD, the system may not be operated normally.


System Operation

1. Turn on the unit. System booting will commence. The LG logo image will be displayed on the main monitor during the system booting.
2. When the booting is completed the live window will be displayed. Click the  icon on the system control bar or press the LOGIN button on the remote control to display the log-in window.
3. Select a user name by using the mouse or arrow and the OK button on the remote control or front panel. For the first time, you can select the ADMINISTRATOR user name only. You can register a new user with various access rights using the user setup menu.
4. Enter the password by using the virtual keyboard. (Note that the default administrator password is "000000".)
5. Click the [OK] icon.
You can see the live screen and operate the system.

NOTE


If the system is turned off accidentally and then turned on again, the system may take a long time to be rebooted.

System Shutdown

1. First, you must stop playback and exit the setup menu. In playback, press STOP.
2. Press and hold  (POWER) button until the beep sounds and the logout window will be displayed.
3. Enter the password by using the virtual keyboard.
4. Click the [OK] icon. The system will shutdown.

General Explanation of the Live Screen on the Main Monitor

Main Monitor Screen

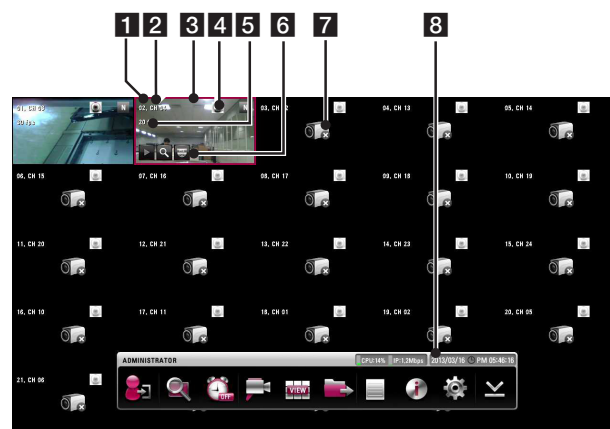

1 Channel Number

Displays the channel number.









2 Channel Name

Displays the edited channel name.

3 Selected Channel

Displays the selected channel with red box.

4 Camera Status Icon



	Displays the PTZ camera status.
	Displays the input audio status.
	Displays the IP camera status.
	Gold "C" indicates continuous recording.
	Gold "I" indicates Instant recording.
	Red "S" indicates sensor triggered recording.
	Green "M" indicates motion detection recording.
	Gray "N" indicates the channel is not being recorded.

5 Channel FPS

Displays the channel FPS value.

6 Quick Buttons

The Quick Buttons will appear when the mouse is moved to the camera's live screen. You can use the following functions by clicking it for the selected channel.

	You can use the playback function.
	You can use the digital zoom function.















You can control the PTZ Camera. (optional)




7 Live Screen

Displays the current surveillance live screen.

8 System Control Bar

	Displays the CPU usage and Data traffic level of IP cameras.
	Displays date and time.
	Login (Logout) : Display the User Log-In dialog box or logs out.
	Search: Displays the search menu.
	Alarm Off: Turns the alarm off.
	Camera: Displays the Monitor menu to set the first camera channel.
	Split mode: Displays the menu for selecting the screen division.
	Video Export: Displays the export menu.
	System Log: Displays the system log list window.
	System Information: Displays the system information window.
	Setup: Displays the setup menu.
	Minimizes the System Control Bar.


NOTE

- **To display / minimize the system control bar**
To display or minimize System Control Bar, press OSD after pressing the SHIFT button on the front panel or click  or  in the System Control Bar.
- You can also use the system control's options by clicking the right button of the mouse on the Main Monitor screen.
- When data signal color of IP camera is changed yellow or red, reduce bit rate, frame rate, resolution and connections of IP camera.
- While the main monitor is performing the sequence mode, the  mark is displayed on the system control bar.

Moving the Channel's Position

You can change the camera channel's position in a split screen of the Main Monitor.


1. Select a desired channel by clicking the left button of the mouse.
2. Drag and drop it to a desired location and the channel's position will be changed.

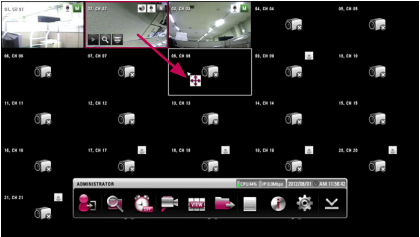

Selecting the Split mode

You can select the live screen mode to display a full, 4-split, 6-split, 8-split, 9-split, 16-split, 17-split or 25-split screens on the main monitor.

1. Press VIEW or click  icon in the system control bar.
2. Select a screen mode.

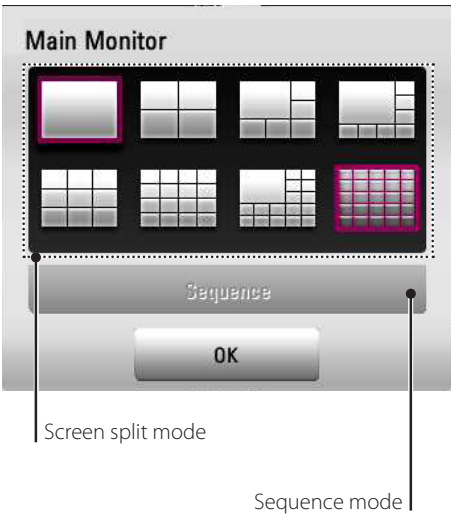


- **Full Screen Mode:** You can view the live window in full screen mode.
 - **4, 9, 16, 25, 1+5, 1+7 and 1+16 Split Mode:** Displays selected split screens on the main monitor.
 - **Sequence:** You can view all the channels in sequence. You cannot use sequence mode with the 25 split.
3. Select [OK] and press OK to confirm your selection.

NOTE

To display the screen you want to watch in full screen mode, double click the desired channel.

Grouping channel

You can group channels you want.

1. Press CAM or click the  icon in the system control bar.
2. Select a camera number for including group.
 - [Restore to Default] : Reset channels to ascending sort and change the [Split Mode] to 25 split.











3. Select group number on the drop-down list.
4. Click [Load] or [Save] button to configure your group.
5. Select [OK] and press OK to confirm your selection.



NOTE

The [Split Mode] changes according to a number of selected cameras.

	Displays or disappears the preset control options in the virtual PTZ remote control
	Displays the Selected Preset number.
	To input the preset number.
	To register preset positions.
	To delete a memorized preset position.
	To move the camera to the preset position.
	To start a preset tour.
	Confirm the preset position.



NOTE


You can use some options by clicking the right button of the mouse in PTZ camera control mode.










- PTZ Control Guide: Shows the guide for using the mouse.
- Exit: Exits from the PTZ camera control mode.

The IP camera which is connected by Onvif driver is not supported Focus and Iris function on the PTZ operation.

PTZ Camera Control

You can control the cameras connected via Network.

1. Select the PTZ camera channel on the main monitor you want to control.
2. Press PTZ or click the  icon that appears when the mouse is moved to PTZ camera's screen.
Virtual PTZ remote control is displayed on the main monitor.
3. Use each item to control the PTZ camera.

Button	Function
	Displays the PTZ control guide.
	Displays the setup menu of the PTZ camera.
	Minimizes PTZ virtual remote control.
	Removes the PTZ virtual remote control.
	Use to pan/tilt the camera.
	You can select the Pan/Tilt/Zoom speed.
	You can adjust the camera zoom.
	You can adjust the focus of a camera manually.
	You can adjust the iris of a camera manually.







Preset Settings

Preset position is the function to register camera monitoring positions (preset positions) associated with position numbers. By entering the position numbers, you can move cameras to the preset positions.

NOTE

- To activate this function, you need to register the preset positions of the PTZ cameras.
- ONVIF preset may not be operated properly with this unit.

To Register Preset Positions



- Move the camera to a point you wish by using the     buttons.
- Press SET or click the  icon.
- Select the preset number you wish to register.
- Press OK or click the  icon.
The position and its number are memorized.
- Repeat steps 1 to 4 to add additional positions.

NOTE

Preset numbers from 0 to 255 are available on this unit but the actual preset range differs depending on PTZ cameras.



Changing to a Picture in a Preset Position

The following function is available only with cameras provided with the preset function. The preset function makes the combination camera move to the programmed preset position. It is necessary to program preset positions for the combination camera beforehand.

- Press the MOVE button or click the  icon.
- Use number buttons to enter the memorized preset position's index number then press OK or click the  icon.
The camera moves to the preset position and the picture of the camera in that position appears on the monitor.

To Clear the Preset Position

You can clear a memorized preset position.

- Press the CLEAR button or Click the  icon.
- Use number buttons to enter the memorized preset index number then press OK or Click the  icon to clear the preset positions.

NOTE


This function may not be available depending on PTZ cameras.

To Tour The Preset Positions

You can tour all preset positions.










- Press the TOUR button or Click the  icon.

All registered preset positions in the camera will be selected and the camera position image will be switched on the active monitor.

- You can stop the tour by pressing the TOUR button or clicking the  icon.

Setup for PTZ Cameras

You can adapt the camera to your requirements by setting up the respective items in menus.



 
 
- Click the  icon.
The setup menu appears in the selected window of the main monitor.
- Use        and  buttons to set the options.

NOTE

- Refer to the manuals of the PTZ camera for more details.
- Some PTZ cameras may not operated properly with this unit.
- You cannot control the other functions when the PTZ virtual remote control is displayed.

Using the Digital Zoom function

You can enlarge the current screen 2-4 times using the digital zoom function on one live channel with full screen mode or one channel playback with full screen mode.

- Press ZOOM(+) button during viewing a live channel in full screen mode or playing back a channel in full screen mode.
- You can use the zoom screen as following.
 - You can move the position of the zoom screen by using the     buttons.
 - You can move the zoom screen by using the mouse. Drag & drop a point to the specific point to move the zoom screen.
- Press BACK button to exit.

NOTE

The zoom function is deactivated when below case.


- When double click the left mouse button.
- Press the specific channel or function button which front panel of the unit.
- Press the STOP button during the playback.


You can use some options by clicking the right button of the mouse in the digital zoom mode.

- Digital Zoom Control Guide: Shows the guide for using the mouse.
- Exit: Exits from the digital zoom mode.

Export the recorded data

This unit can manually copy recorded images and audio from built-in HDD to the external recording devices.

1. Press COPY or click the  icon in the system control bar. The [Video Export] menu appears.

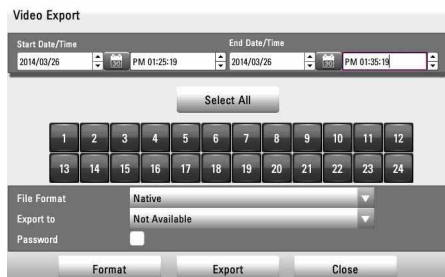

2. Set the [Start Date/Time] and [End Date/Time] to search.
 - ◀/▶/▲/▼: Moves to the options.
 - ▲/▼: Sets the selected option.
 - OK: Selects option or confirms the setting.
3. Select the channel number and press OK. Repeat this step to select multi channels.
4. Select the one of file format on the drop-down list of the [File Format].
 - Native: The Native file is saved with the extension of "*.exp". The saved native file can playback using the Export Viewer program.
 - AVI LG: To playing AVI LG file, you have to install the LG DVR Codec. If you install the LG Network Client, do not need to install the LG DVR Codec.
 - AVI: If you select AVI file format, it can play on any media player.
5. Select [Export to] then press OK.
6. Use ▲/▼ to select a target device to export.
7. Press OK to confirm it.
8. You can set the password in case of the native file. To register the password, click the checkbox of [Password]. The password window is displayed. And then, enter the password by using alphabetic letter and numeric digit 4-12 characters.
9. Click the [Export] icon to start exporting. The exported data will be authorized by the unit before saving and it can only be played back with the exclusive player.




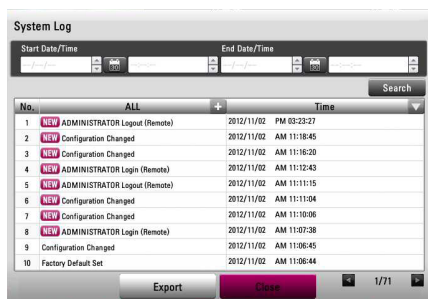
NOTE

- Check the export device before you proceed.
- You can also use the COPY button on the front panel for export function.
- If you use the external device, the external device has to be formatted on this unit.
 1. Connect the external device to the USB port on the front or the rear of the system.
 2. Select the [Format] icon then press OK. Confirm window is displayed after format is completed.
 3. Select [OK] and press OK to close the window.
- Check the size of the selected data and free space of the external device. If the device does not have enough space, create space on the device or erase the previously stored data.
- Export can not be executed while the backup is in progress.
- You can search the exported data with the supplied viewer software.
- When you export the recorded data, the video data, audio data, the system log and event log data will also be exported.
- When you export the recorded data the export viewer program will also be exported in the [ExportViewer] folder of the device. The exported data file name is made automatically as the [Channel name_export date_export time.exp] type.
- Do not remove the USB device while the export is in progress, it may cause a malfunction.
- The warning message appears for the conditions listed below.
 - When the start date/time and end date/time are the same value.
 - When the start date/time is later than the end date/time.
 - The export media does not have enough space.
 - When you set the time for data that does not exist.
- An external media has to be formatted on this unit to prevent a malfunction.
- DVD+RW and DVD-RW discs have to be initialized before using.

Viewing the System Log List

To view the system log list:

1. Press the LOG button or click the  icon in the system control bar.



2. Set the [Start Date/Time] and [End Date/Time] to search.
 - ◀/▶/▲/▼: Moves to the options.
 - ▲/▼: Sets the selected option.
 - OK: Selects option or confirms the setting.
3. Use ◀/▶ to see the previous or next log list.
4. Press the BACK button or click the [Close] button to exit the window.




NOTE

Refer to the following system log list.

No.	Log Message
1	Power On
2	Power Off
3	Login (Remote)
4	Logout (Remote)
5	Login (Local)
6	Logout (Local)
7	Configuration Changed
8	Configuration Imported
9	Factory Default Set
10	Power Recovery
11	Backup Started
12	Backup Finished
13	Backup Failed
14	Export Started
15	Export Finished
16	Export Failed
17	S/W Updated
18	HDD Damaged
19	HDD Added
20	HDD Deleted
21	HDD Formatted
22	HDD Changed

Viewing System Information

To view system information:


1. Press the INFO button or click the  icon in the system control bar.



- Ethernet 0 / 1: Displays the detail information of the Network.
- Camera Information: Displays the detail information of the camera framerate.




- HDD Information: Displays the detail information of the HDD.

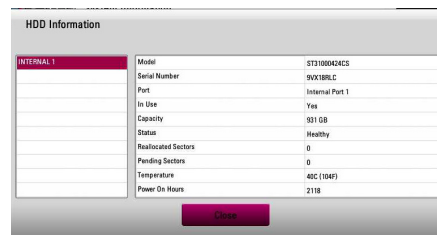

- Refresh: Updates the system information.
2. Press the BACK button or click the [Close] button to exit the window.


Configuration menu

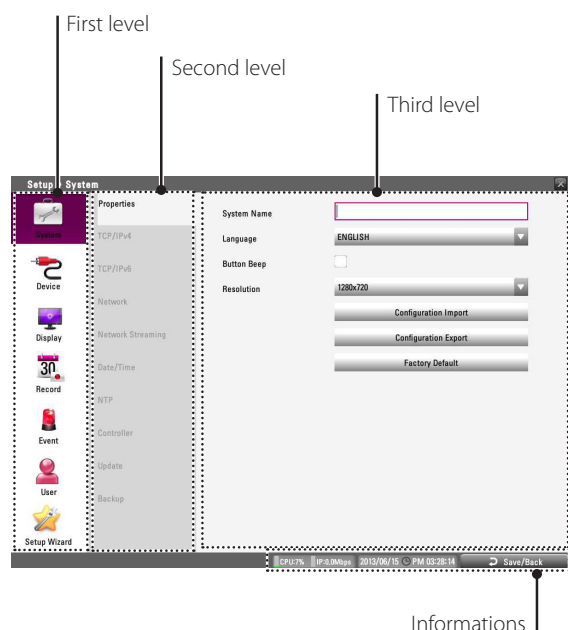


The features and options of the system are configured through the menu. The operations of this unit can be set via a menu displayed on the main monitor. You can select and set the operational conditions by using the buttons on the front panel and the remote control or using a Mouse connected to the unit.









Using a mouse to set a menu

Use the left mouse buttons to set the menu.

Button	Function
	Left button Use to select a required item.

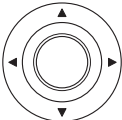1. Click the  icon on the System control bar with the left mouse button to display a setup menu.
2. Click the desired option with the left mouse button to display the second or third level menu options.
3. Click the desired option with the left mouse button.
4. Set the selected options value.
5. Click the  icon or click  icon repeatedly to exit setup menu.
If the save message appears, click [OK] with the left mouse button to save the settings.

Setting the Menu Using the Front Panel Buttons or Remote Control Buttons

Front Panel	Remote Control	Description
		Use these buttons to select the menu options or adjust the options value.
		Select the option or confirm the setting.
		Return to the previous menu or level.


1. Press SETUP to display the setup menu.
2. Use ▲/▼ to select the desired menu item, then press OK to display the submenu.
3. Use ▲/▼ to select the desired submenu item, then press OK to display the setting options.
4. Use ▲/▼ to select the desired option then press OK to set the value.
5. Use ◀/▶ to select the desired setting then press OK to confirm your selection.
6. Press BACK repeatedly to exit the Setup menu.
If the save message appears, select [OK] and press OK to save the settings.

NOTE

- When you operate the function menu by using the remote control and front panel buttons, both buttons are operated in the same way to control the function menu.
- To use other functions of number buttons on the front panel, follow the below steps.
 1. Press SHIFT. The button indicator turns red.
 2. Select the function button you want.
- All the operation explanations are based on using the remote control.


System settings

Properties

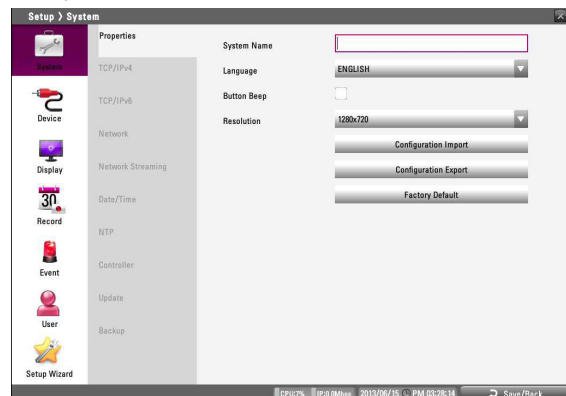


- **System Name:** Enter the system name by using alphabetic letter, numeric digit and symbols up to 21 characters. The number of maximum characters is depends on the language.
- **Language:** Select a language for the setup menu and information display.
- **Button Beep:** Marks up to activate the button beep. The button beep is activated when using the buttons.
- **Resolution:** Sets the output resolution of the video signal.
- **Configuration Import:** Import the system configuration data from the USB memory stick.
- **Configuration Export:** Export the configuration data from this system to the USB memory stick.
- **Factory Default:** You can reset the system to its original factory settings. Some options cannot be reset (date, time, daylight saving, time zone and user password settings).

TCP/IP v4

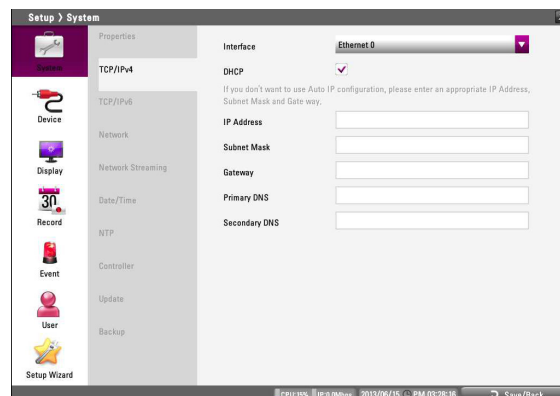


- **Interface:** Select a LAN port you want to use (Ethernet 0 or Ethernet 1).
- **DHCP:** Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
- **IP Address:** Enter the IP address.
- **Subnet Mask:** Enter the subnet mask address.
- **Gateway:** Enter the gateway address.
- **Primary DNS:** Enter the Primary domain name server that translates the hostnames into IP address.
- **Secondary DNS :** Enter the Secondary DNS server address that backups the Primary DNS.

TCP/IP v6

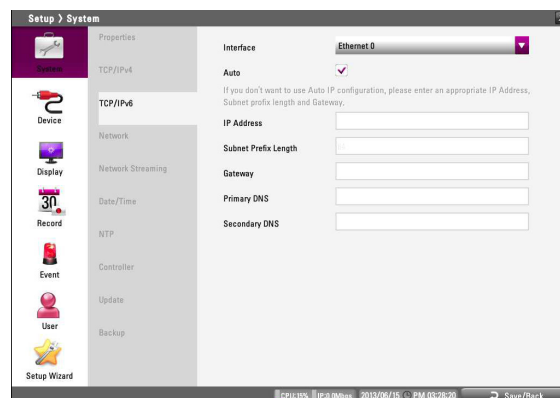

- **Interface:** Select a LAN port you want to use (Ethernet 0 or Ethernet 1).
- **Auto:** Select this option to assign the IP address automatically.
- **IP Address:** Enter the IP address.
- **Subnet Prefix Length:** Enter the Subnet Prefix length. An IPv6 prefix indicates the portion of the address used for routing or identifying an address range.
- **Gateway:** Enter the gateway address.
- **Primary DNS:** Enter the Primary domain name server that translates the hostnames into IP address.
- **Secondary DNS :** Enter the Secondary DNS server address that backups the Primary DNS.

Network

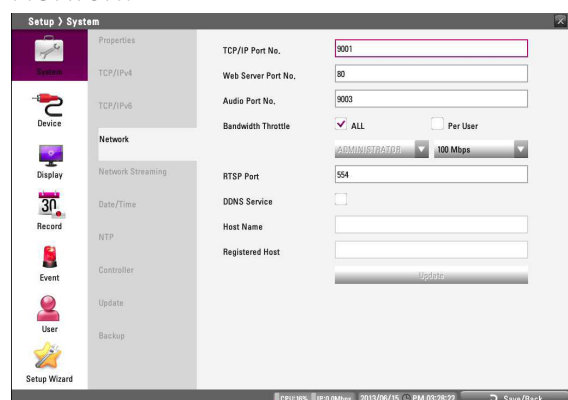

- **TCP/IP Port No.:** Enter the TCP/IP Port number. You can watch the live surveillance image over the network with the PC Client program. The factory default TCP/IP port for transmission of video data is 9001 and audio data is 9003. However in some cases it is better to change this port number for added flexibility or security. You can edit this port between 1025 and 65535.
- **Web Server Port No.:** Enter the Web Server Port number. You can watch the live surveillance image over the network with a web browser. Typically the TCP port used by HTTP is 80. However in some cases it is better to change this port number for added flexibility or security. You can edit this port to 80 or between 1025 and 65535.
- **Audio Port No.:** Enter the Audio Port number. You can edit this port between 1025 and 65535.
- **Bandwidth Throttle:** Select [All] or [Per User] to set the bandwidth value.
 - All: Set same bandwidth to all of users.
 - Per User: You can set the bandwidth value per each user. Select [User ID] from the left drop-down list. And then, set the bandwidth from right drop-down list
- **RTSP Port :** Enter the RTSP Port number. You can edit this port between 1 and 65535. Default Port number is 554.
- **DDNS Service:** Marks up to activate the DDNS function. This free service is very useful when combined with the LG DDNS Server. It allows the user to connect the IP device using the URL, rather than an IP Address. This also solves the problem of having a dynamic IP address.
- **Host Name:** Enter the host name you want to use. You can not use the "www", "mail", "http", "ftp", "com", "lg", "lge", "lgddns", "lgeddns", "ddns" for host name.
- **Registered Host:** The registered host name appears.
- **Update:** Register the host name you typed in [Host Name] to LG DDNS server.

How to register DDNS host name

When you use the DDNS function for the first time after you purchased LG DVR/NVR


1. Displays the DVR/NVR setup menu.
2. Select [System] > [Network] option.
3. Marks up for the [DDNS Service] option.
4. Enter the host name in the [Host Name] option.
5. Press the [Update] button. If host registration is properly completed, the host name will be displayed in the [Registered Host] option. If the host name is not registered after updating, please check network connection.

When you want to change DDNS host name

If you want to change the registered host name to new one, follow as shown below.

1. Enter a new host name in the [Host Name] option.
2. Press the [Update] button. The confirmation window will be displayed to change your host name.
3. Click the [OK] button. When host name is properly changed, the changed host name will be displayed in the [Registered Host] option. If host name is not changed after updating, please check network connection.

Network Streaming

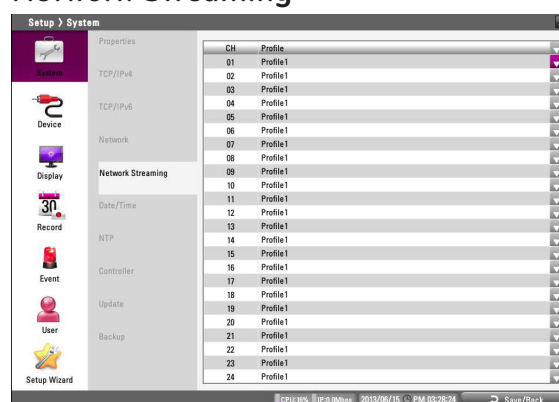


- **CH:** Displays the channel number.
- **Profile:** Selects the profile of stream. The [Profile] option is activated in case of IP Camera only.

NOTE

If you need to adjust the image size to send to the client, set the stream option of the [IP Device-Profile1 or Profile2]. And then select the proper Profile from the [Network Streaming-Profile]. You can control the bandwidth value forward to client.

Date/Time

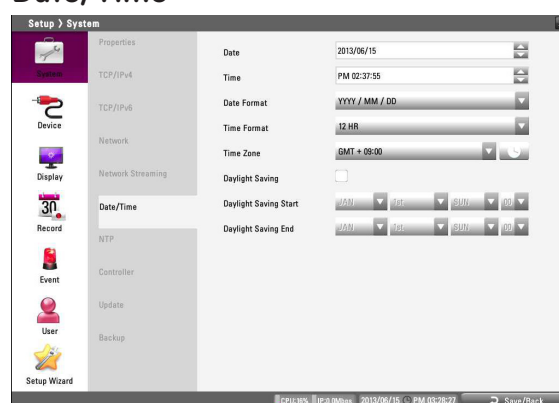


- **Date:** Select the current year, month and day.
- **Time:** Select the current time.
- **Date Format:** Select the date display format.
- **Time Format:** Select the time display format.
- **Time Zone:** Select the time zone in the area where the system is installed.
- **Daylight Saving:** Mark up if you want to use the daylight saving

function.

- Daylight Saving Start: Select the Daylight Saving start time.
- Daylight Saving End: Select the Daylight Saving end time.

NTP

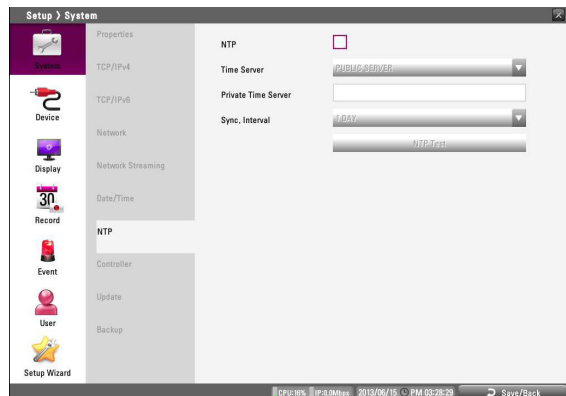


- NTP: Marks up, if you want to synchronize the system's date and time with those of the time server called NTP. (Network Time Protocol) Specify the NTP server's name.
- Time Server: For most cases select public. The system will obtain the average time among 5 public servers (time.nist.gov, time-a.nist.gov, time-b.nist.gov, ntp.nasa.gov, clock.isc.org).
- Private Time Server: Enter the private time server's IP address or host name using the virtual keyboard.
- Sync. Interval: You can set synchronized intervals with the NTP time server to 1 day, 1 week, 1 month and 1 hour.
- NTP Test: Select [NTP Test] to test the NTP server.

NOTE

If the NTP option is not set to this system, there can be a gap between the system time and actual time. Using NTP is recommended.


Controller

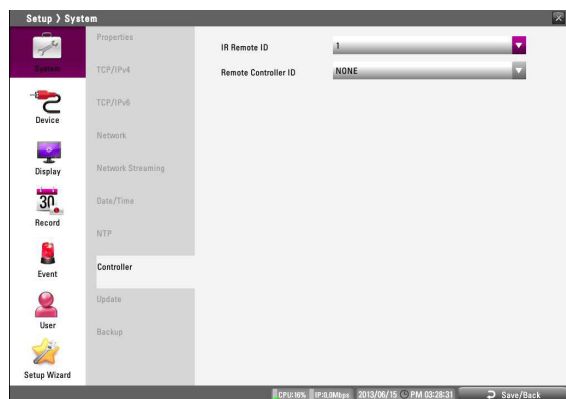

- IR Remote ID: Select the IR Remote ID for this unit. If you use multi systems set the IR Remote ID for each unit.
- Remote Controller ID: Select the Remote Controller ID for this unit. If you use multi systems, set the Remote Controller ID for each unit. You can control the system by using the LKD1000 controller. (For more details refer to the LKD1000 owner's manual.)

Update

This function is aimed at upgrade the system software. In this case, the current system settings are not deleted or replaced during the update process.

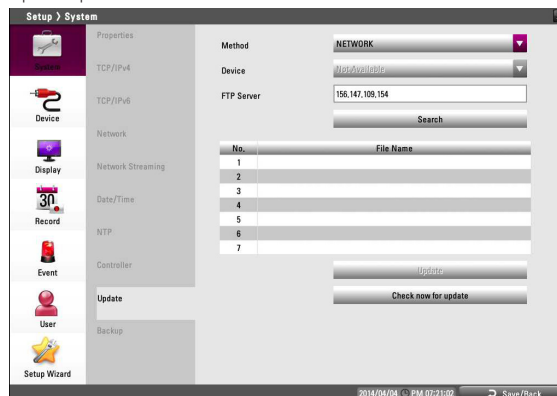

1. Selects the update method.
2. Selects the device included update file or enter the FTP server name.

NOTE


If you select the update method to [LOCAL], the [FTP Server] option will be disabled and the [Device] option is activated. And if you select update method to [NETWORK], the [Device] option will be disabled and [FTP Server] option is activated.

3. Select the [Search] button and press OK. The update file is displayed in the list.
4. Choose the update file from the list.
5. Select the [Update] button and press OK. The confirmation window is displayed.
6. Select [OK] to begin the update process or click [Cancel] to stop and exit. After the update process is completed, the [Restart the system] message appears.
7. Click [OK] to restart the system.
8. To confirm the latest version, click the [Check now for update] button to visit <http://www.lgecommercial.com>

NOTE

- Do not turn the power off during the update process to prevent the malfunction.
- Do not remove the external device or CD/DVD disc for update whilst the update is in progress. It may cause a malfunction.

Backup

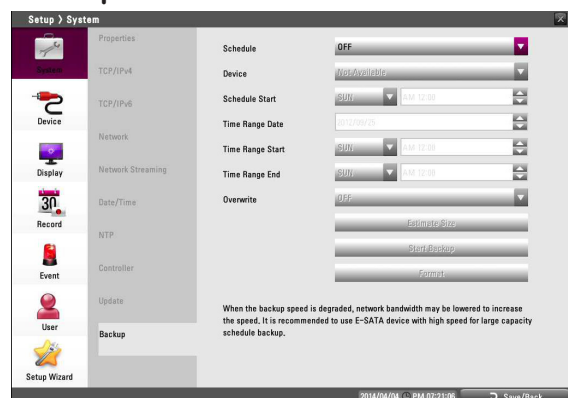

- Schedule: You can set the backup schedule.
 - OFF: All options are disabled.
 - WEEKLY or DAILY: The backup data will be automatically saved according to the setting.
 - INSTANT: The backup data is saved manually.
- Device: Select a backup device.
- Schedule Start: Set the schedule start date (A day of the week and time).
- Time Range Date: Enter the backup time range. Enter the date you want to backup.
- Time Range Start: Enter the start day of the week or time.
- Time Range End: Enter the end day of the week or time.
- Overwrite: Sets whether you use Overwriting function for schedule backup.
- Estimate Size: Displays the size of backup data and the free space of external devices.
- Start Backup: To start backup.
- Erase Media: To erase the media.

Instant Backup

1. Connect the backup USB device or insert a recordable disk to the disc driver for backup.
2. Select the partition you want to backup.
3. Select INSTANT from the schedule options.
4. Select the backup device.
5. Select the Time Range Date, Time Range Start time, and Time Range End time for backup.
6. Select the [Estimate Size] icon and press OK.
7. Check the size of the selected data and free space. If the device does not have enough space, create space on the device or erase the previously stored data.
8. Select the [Start Backup] icon and press OK to start backup.
9. Exit the setup menu. You can check the backup status on the system control bar in backup progress.

Daily/Weekly backup

1. Connect the USB device for backup. You cannot use the CD or DVD writer for daily or weekly backup.
2. Select WEEKLY or DAILY on the schedule options.
3. Select the backup device.
4. Enter the date and/or time to start backup on the schedule start option.
5. Enter the day of week and/or time on the Time Range Start option.
6. Enter the day of week and/or time on the Time Range End option.
7. Select On or Off in the [Overwrite] option.
8. Select the [Estimation Size] icon and press OK.
9. Check the size of selected data and free space of USB device. If the USB device does not have enough space, change the USB device to a USB which has enough space or erase data of the connected USB device.



NOTE

- The backup function is not supported on the external USB CD-ROM driver.
- Available external device for backup.

Device	Capacity
USB HDD	Up to 2 TB.
E-SATA HDD	Up to 2 TB.

- Use the recommended external USB devices for preventing malfunction (See the page 48.).
- For the latest recommended HDD list, please visit <http://www.lgecommercial.com>
- The CD-R, DVD-R or DVD+R discs cannot be formatted.
- DVD+RW and DVD-RW discs have to be initialized before using.
- An external media has to be formatted on this unit to prevent malfunction.
- You cannot use the [Estimate size], [Start Backup] and [Erase Media] options in backup progressing.
- Do not remove the external device while the backup is in progress, it may cause a malfunction.
- If you format the external media by using a PC with FAT32, the media may not be used on this unit.
- Check the size of the selected data and free space of the external device. If the device does not have enough space, create space on the device or erase the previously stored data.
 1. Select the [Estimate Size] icon and press OK.
The size of the selected data and free space is displayed.
 2. Select [OK] and press OK to close the window.

NOTE

- You cannot stop the backup when the backup is in progress.
- The warning message will appear for the conditions listed below.
 - When the start time and end time are the same value.
 - When the start time is later than the end time.
 - When you set the time for data that does not exist.
 - When the start time and end time setting are wrong.
 - A media does not have enough space.
 - When the selected USB device is disconnected.
- The disc burning is carried out by a multi session mode.
- If you use the CD/DVD writer device for backup, it makes ISO image before writing the backup data on the CD/DVD.
- You can see the backup progress status on the system control bar.
- The estimated size of backup data is only the approximate size. So you must prepare sufficient space on the media to prevent lack of space.
- At the scheduled recording time, you can check the backup status on the system control bar.
- While export is in progress or searching the backup data from the external USB device, the scheduled backup will not be started. After the export or backup search is finished, scheduled backup will be restarted.
- When you set the schedule backup, the backup data size is estimated from the recording settings of the Setup menu. If the real recorded data size is over the estimated recording data size, the schedule backup may not be activated.
- If you use the overwrite function in the [Backup] option, the oldest backup data is deleted.
- Although all of backup data is deleted, backup is not implemented if the device does not have enough space.

Device settings

IP Device



- CH: Displays the channel number.
- Name: Enter the channel name.
- Model Name: Displays the model name of IP device.
- MAC: Displays the Mac address of IP device.
- IP: Displays the IP address of IP device.
- HTTP Port: Enter the HTTP port number. HTTPS is not supported.
- / : You can see other options (Driver, Profile1, Profile2, RTSP Port, RTP Mode, Audio Recording) to click button. To return previous options, click button.
- Driver: Selects the IP camera driver from the drop-down list.
- Profile1: Select the camera stream on the drop-down box for recording.
- Profile2: Select the camera stream on the drop-down box for streaming. For smooth live playback, the resolution of [Profile2] set lower than resolution of [Profile1].

NOTE

- When you select full screen mode on the [split mode], [Profile1] operate for streaming automatically.
- When CPU usage occupies more than 90% and then 1 minute goes by, connection of [Profile2] is limited for the stability of system.
- RTSP Port: Enter the RTSP port number.
- RTP Mode: Select the RTP mode from drop-down list.
- Audio Recording: Check the audio recording option.
- Setup: Click the check box of the desired channel and then press the [Setup] button. The setup window will be displayed.

NOTE

- In case of same driver and same model, even if you select several channels, the [Setup] button is activated.
- The setting of the smallest channel number among the selected channels is displayed. And, you can configure the same settings.
- In case of the Axis or Onvif driver, batch setup may not work according to the camera model and the firmware.
- In case of the LGE models, [Profile1] and [Profile2] are displayed as [Master] and [Slave].

• Audio/Sensor setting

You can configure this option when you select to [LGE] on the [Driver] option. Select [Audio/Sensor] tab of the [Setup] window.

- Audio In: Click the check box if you want to send the audio from the microphone input connector.
- Audio Type: Select the codec when you send the audio from the microphone input connector.
- Audio Out: Click the check box to output the audio from the speaker.
- Sensor: Select the sensor number on the drop-down list.
- In Use: Marks up when you want to activate the sensor.
- Sensor Type: Select the sensor type.
- Relay Output: Select the relay output number on the drop-down list.
- Relay Type: Select the relay type.
- Control Duration: Enter the relay time.

Motion Setting

You can configure this option when you select to [LGE] on the [Driver] option. Select [Motion] tab of the [Setup] window.

1. Click the [Add] button. The motion detect window is displayed. You can add the five windows maximum for motion detection area.
2. Set the [Sensitivity] option.
3. Click the edge or corner of the window box to adjust the window size for motion detection.
4. Click the [Save] button to save the settings.

Stream Setting

If you select to [LGE] on the [Driver] option, select the [Stream] tab. When you select [ONVIF] on the [Driver] option, you can configure the stream setting only. In case of [AXIS], the [Bitrate] and the [Compression] options are activated only.

- Stream (LGE only): Select the video stream.
- In Use (LGE only): Click to activate the stream function.
- Video Codec: Select the video mode (Codec) from the dropdown list.
- Resolution: Select the output image size of the camera.
- Frame Rate: Set the frame rate of the image.
- GOP: It means "Group of Pictures". The higher the GOP, the better is the video quality of the camera. Edit the value of GOP from 1 to 30. This setting is valid for H.264 video format only.

! NOTE

It recommended that you set the [GOP] value same as [Frame Rate].

- GOV (ONVIF only): It means "Group of VOPs". The VOP is an image frame in the MPEG-4 video stream. Edit the value of GOV from 1 to 30.
- Quality: Select the Quality.
- Stream Quality (LGE only): If the [Quality] option set to VBR, this option is displayed. Select the stream quality from the drop down box, the camera supports five types. (Highest, High, Medium, Low and Lowest)
- Bitrate: If the [Quality] option set to CBR, this option is displayed. Edit the bit rate value from 256 kbps to 10 240 kbps.
- Compression (AXIS only): Enter the compression ratio of

video. The lower value you set up, the higher definition picture you get.

- Delete: Click the check box of the desired channel and then press the [Delete] button. Registered channel of IP Camera will be deleted.


To register the IP device automatically

Model Name	MAC	IP	HTTP Port	Driver	Verify
<input type="checkbox"/> LNP2810T		10.20.98.190	80	ONVIF	
<input type="checkbox"/> LW345		10.20.98.219	80	ONVIF	

User Name:
 Password:

1. Click the [AUTO] button.
2. The search window will be displayed and start to search the IP device automatically. By stopping or restarting the search, click [Stop] or [Refresh] button.
3. Click the check box of desired device.
4. Enter the [User Name] and the [Password] and then click the [Add] button. When you select several channels, channels are assigned same ID and password.
5. Confirm the result of authentication on the [Verify] option.
 - O: The verification is valid.
 - X: The verification is invalid. Check the ID and password again.
 - XX: Connection failed.
6. Click the check box of confirmed cameras. Selected cameras are registered channel in order.
7. Click the [CLOSE] button to exit the window.

To register the IP device manually

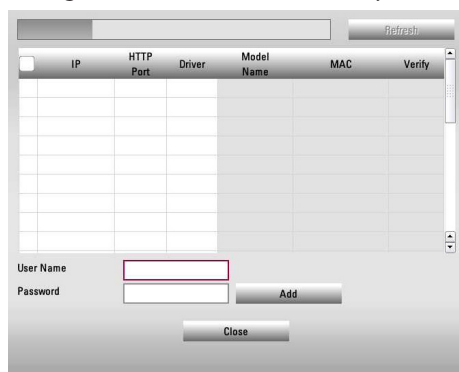

1. Click the [MANUAL] button.
2. Enter the IP address.
3. Click the check box of desired device.
4. Enter the [User Name] and the [Password] and then click the [Add] button. When you select several channels, channels are assigned same ID and password.
5. Confirm the result of authentication on the [Verify] option.
6. Click the check box of confirmed cameras. Selected cameras are registered channel in order.
7. Click the [CLOSE] button to exit the window.




NOTE

- The Supported IP camera specifications.

Specification	Description
Driver	LGE, AXIS, ONVIF
Recording mode	Continuous, Instant, Motion, Sensor
Video Codec	H.264, MPEG4, MJPEG
Audio recording and playback	Support
Resolution	CIF, Half D1(2CIF), D1(4CIF), UXGA, 720p, 1080p (Up to 2048 x 1536)
Stream	LGE (Master-0, Slave-0) ONVIF (The stream that is supported from camera) AXIS (H.264, MPEG4, MJPEG)
PTZ	Support
Sensor/Motion input	Support

- It takes time to search IP devices and the necessary time depends on the network environment.


Storage

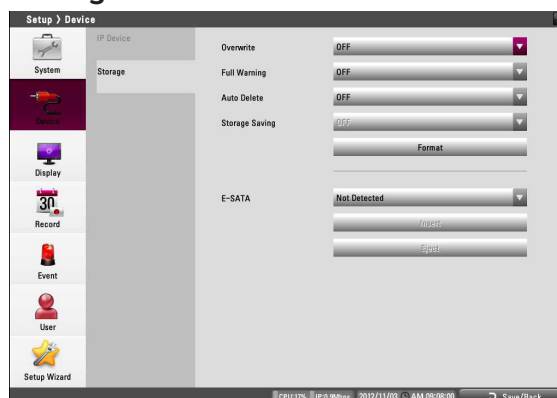

- Overwrite: Sets whether you use Overwriting function.
- Full Warning: When the HDD has overflowed a warning message is displayed.
- Auto Delete: Sets the auto delete date. If you set the auto delete date, the recorded data will be deleted except the data within the selected date period of time. The Auto Delete function is activated every 35 minutes.
- Storage Saving : Saves the storage space by reducing the quality of the recorded data.
- Format: Initializes the HDD (Hard Disk Drive). All data on the HDD will be erased.
- E-SATA : Selects the E-SATA device.
- Insert: Uses the selected E-SATA storage for recording data.
- Eject: Uses the selected E-SATA storage for data back-up.


Display settings

OSD

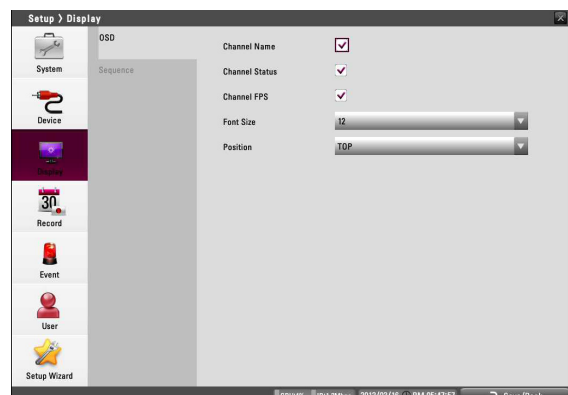

- Channel Name: Mark up to display or remove the channel name in the channel window.
- Channel Status: Mark up to display or remove the channel status in the channel window.
- Channel FPS: Mark up to displays or removes the channel FPS (Frame Per Seconds) in the channel window.
- Font Size: Selects the font size of characters such as the channel name and playback time which displayed on the channel window.
- Position: Selects the position of characters such as the channel name and playback time which displayed on the channel window.

Sequence

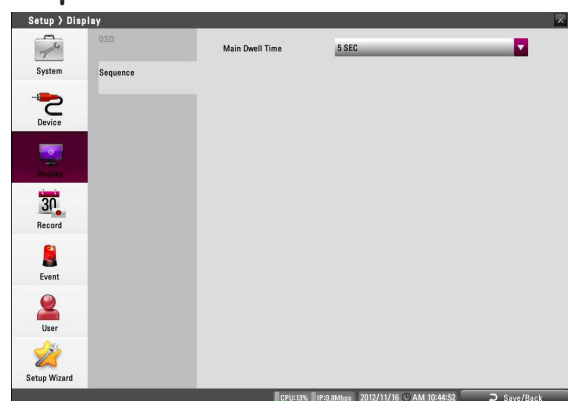

You can view all the channels in sequence in the selected screen division mode. You cannot use sequence mode with the 25 split.


- Main Dwell Time: Selects the channel sequence time for main monitor.

Record settings

Normal Schedule Recording


A Normal schedule recording can be activated at preset times, in a repeating pattern on selected weekdays. The system can record according to a schedule set by the user. It can also record manually regardless of date and time. The recording can be made either continuously or triggered by events (Sensor and motion detection).

The recording schedule screen displays one day of the week showing the schedule of all channels over a 24-hour period. For each 1-hour cell block the recording method can be specified. The recording method for each block is shown in color for easy viewing.

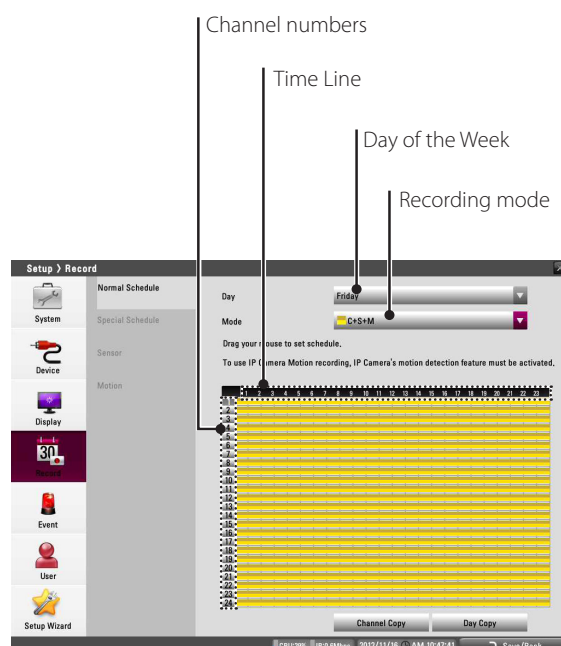


To Set a Recording Schedule for a Typical Day of the Week (Normal Schedule)

1. Select a day of the week.

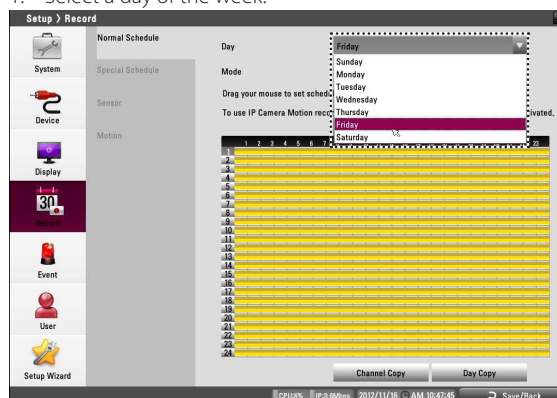

2. Select a recording mode.


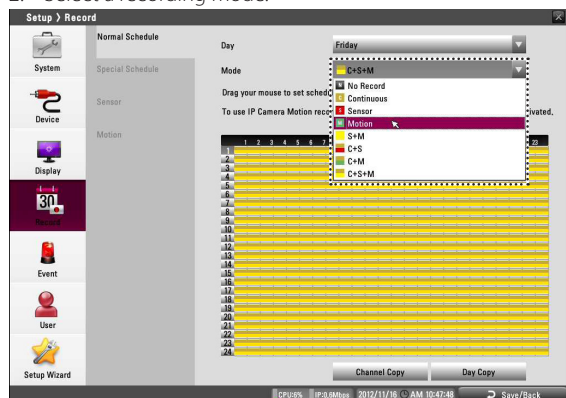


- Gray (No recording): No schedule recording.
- Gold (Continuous recording): Recording starts automatically from the preset time.
- Red (Sensor event recording): Recording starts automatically when the sensor occurs within a designated time.
- Green (Motion event recording): Recording starts automatically when motion is detected within a designated time.
- Yellow (Sensor+Motion recording): Recording starts automatically when the sensor signal has input or motion has been detected.
- Gold+Red (Continuous+Sensor event recording): Recording starts automatically from the preset time. When the sensor occurs within a designated time, changes the continuous recording mode to sensor event recording mode and recording starts automatically.
- Gold+Green (Continuous+Motion event recording): Recording starts automatically from the preset time. When the motion is detected within a designated time, changes the continuous recording mode to motion event recording mode and recording starts automatically.
- Gold+Yellow (Continuous+Sensor+Motion event recording): Recording starts automatically from the preset time. When the sensor signal has been input or motion has been detected, changes the continuous recording mode to motion event recording mode and recording starts automatically.

**NOTE**

In case you set the motion recording setting on the channel of IP camera, the recording starts when Video content analysis event as well as Motion event is occurred.

3. Drag and drop with left button of the mouse to set the channel and time you want to record. The color of the time block is changed depending on the selected mode.

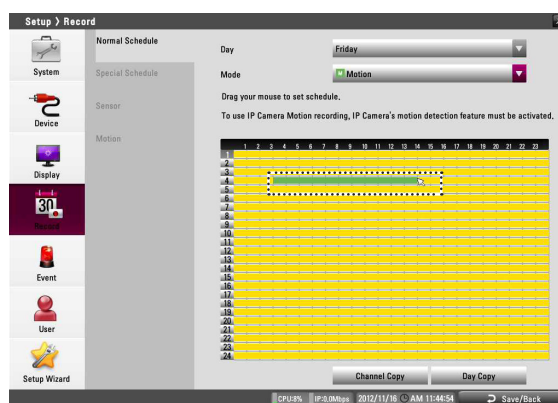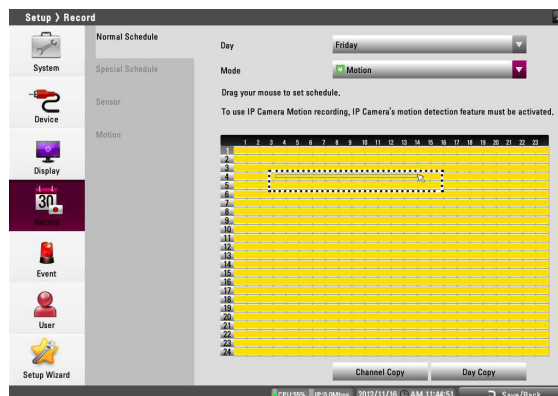


4. Press BACK to move to the previous menu.
If the save message appears, select [OK] and press OK to save the settings.
5. Press BACK repeatedly to exit the Setup menu.

To Set a Recording Schedule for a Special Day (Special Schedule)

In addition to the weekly schedule, up to 15 specific date/time periods can be defined. To configure the specific recording schedule select Specific Dates.

1. Select an Item number.

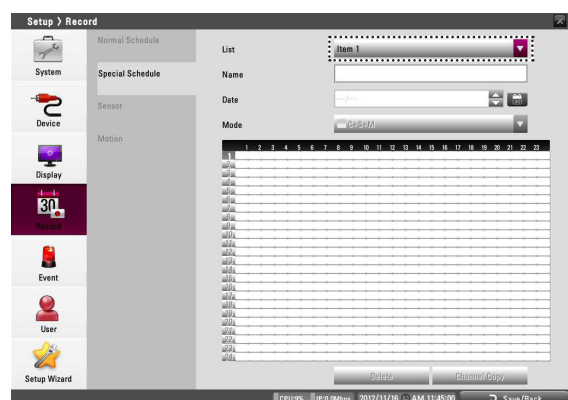

2. Enter the name of the special day. Use ▲/▼/◀/▶ to select the [Name] column and press OK. The virtual keyboard menu appears.
3. Use ▲/▼/◀/▶ to enter the necessary information for year, month and date. You can use the calendar icon to select the date.
4. Select the time cell block on the desired channel.

NOTE

If the special day recording schedule is duplicated with the other recordings, only the special day recording is possible.

Copying the Recording Schedule

Copying from the Scheduled Data of the Channel

You can copy the schedule data of the channel to the other channel(s) within the selected day of the week. You cannot copy the schedule data of the IP channel.

1. Select the day of the week and press OK on the [Normal Schedule] or [Special Schedule] menu.
2. Select [Channel Copy] then press OK then the channel selection menu appears.
3. Use ▲/▼/◀/▶ to select a channel then press OK to select the target channel(s).
You can cancel the selected channel by pressing OK.
4. Select [OK] then press OK to confirm your selection.


Copying from the Scheduled Data of the Day

You can copy the scheduled day of the week to another day of the week, weekday and weekend.

1. Select the day of week that you want to copy.
2. Select [Day Copy] then press OK then the channel selection menu appears.
3. Use ▲/▼/◀/▶ to day of the week then press OK to select the target date(s). You can cancel the selected channel by pressing OK.
4. Select [OK] then press OK to confirm your selection.

Sensor


Settings concerning sensor recording.

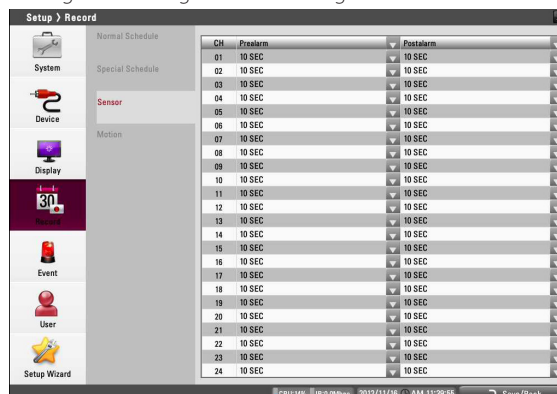

- CH: Displays the channel number.
- Prealarm: Specify the pre-event recording time. When the Event signal is detected, the system records the data before the event during the setting time.
- Postalarm: Specify the post-event recording time. When the Event signal is detected, the system records the data after the event during the setting time.

Motion


Settings concerning motion recording.

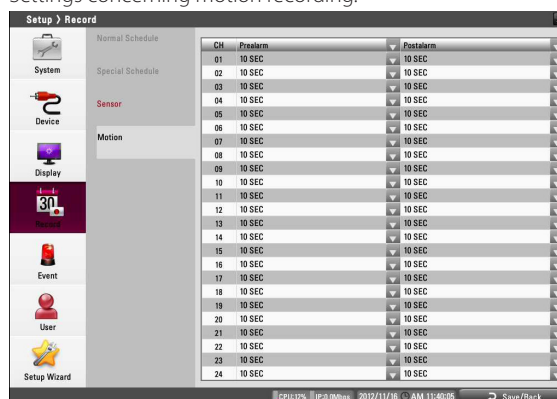

- CH: Displays the channel number.
- Prealarm: Specify the pre-event recording time. When the Event signal is detected, the system records the data before the event during the setting time.
- Postalarm: Specify the post-event recording time. When the Event signal is detected, the system records the data after the event during the setting time.

Event settings


Sensor

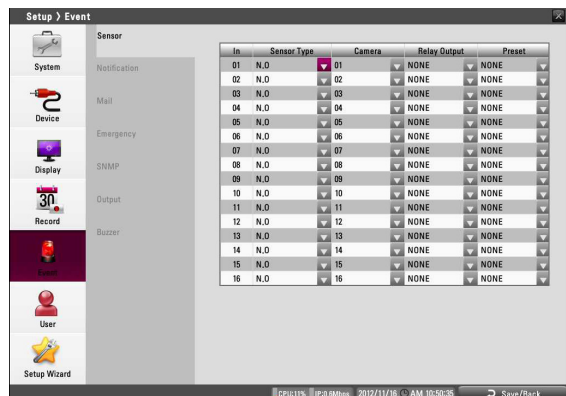

- In: Displays the number of the ALARM-IN terminal.
- Sensor Type: The sensor state can be set to either N.O. (Normally Open) or N.C. (Normally Closed).
- Camera: Select the camera channel connected to the ALARM-IN terminal.
- Relay Output: Select the alarm (relay) output number for the RELAY-OUT terminal for the output alarm (relay) signal.
- Preset: Select the preset number. When the input is activated, the camera moves to the selected preset position and the picture of the camera in that position appears on the monitor.


Notification

Marks up when you want to activate the selected option. If the selected notification option is activated, the device will notify the user about the information of selected option by E-mail.

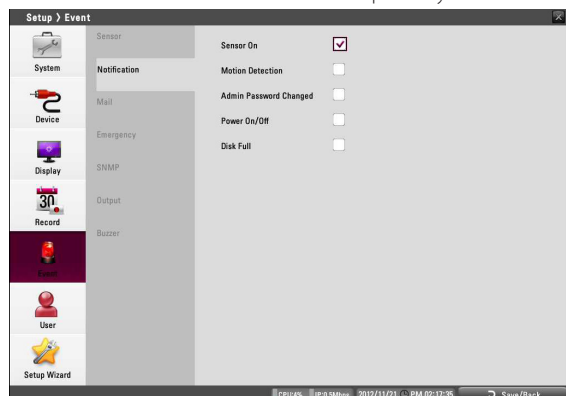

- Sensor On: Sends an e-mail when a sensor has occurred.
- Motion Detection: Sends an e-mail when a motion detection has occurred.
- Admin Password Changed: Sends an e-mail when the administrator password has been changed.
- Power On/Off: Sends an e-mail when power is on or off.
- Disk Full: Sends an e-mail when the HDD has fully recorded.

Mail

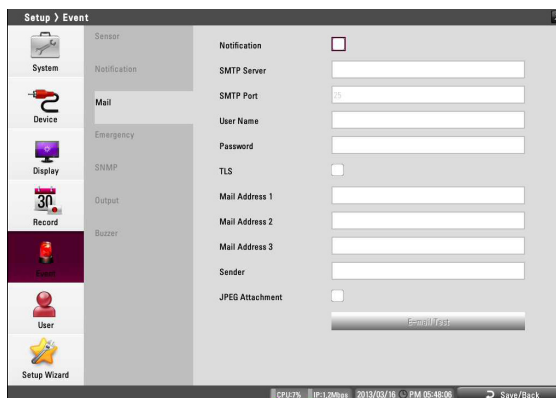


- Notification: Mark up to be notified the unit's operating information according to notification settings by e-mail.
- SMTP Server: Enter the SMTP Server address. If notification option is not mark up and the SMTP server option is empty, the SMTP Port, User Name, Password and TLS options cannot be set.
- SMTP Port: Enter the SMTP Port Number. Typically the port used for SMTP is 25. However in some cases it is better to change this port number for added flexibility or security. You can edit this port between 1 and 65535.
- User Name: Enter the user name.
- Password: Enter the password.
- TLS: Mark up if you use the TLS (Transport Layer Security) function.
- Mail Address (1 to 3): Enter the mail address. You can input up to 3 e-mail addresses.
- Sender: Enter the sender.
- JPEG Attachment: Click the check box to send a mail which want to attach a JPEG file.
- E-mail Test: Select [E-mail Test] to test sending an e-mail.

NOTE

- The SMTP server, SMTP port no., user name or password settings are optional. The DVR can send e-mail directly without the use of an SMTP server or MTA (message transfer agent). In certain cases all e-mail should be forwarded to a specific SMTP server. Specify the server host name or IP address in such a case. For more detail on SMTP setup, ask your network administrator and/or mail service provider.
- [JPEG Attachment] option is operated when event of [Sensor In], [Motion Detection] and [Text In] is occurred.
- In case of an IP Camera, ONVIF JPEG Snapshot feature must be supported to attach a JPEG file.


Emergency

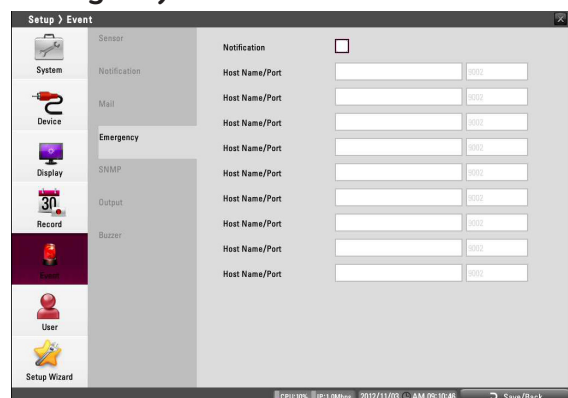

- Notification: Mark up to be notified the emergency agent about the unit's operating information according to your notification settings.
- Host Name/Port: Enter the Host Name and port number of the emergency agent program. The factory default port for this function is 9002. However in some cases it is better to change this port number for added flexibility or security. You can edit this port between 1025 and 65535. You can set up to 9 Host Name and port numbers.

SNMP


The Simple Network Management Protocol (SNMP) is an application protocol to exchange the management information of network devices.

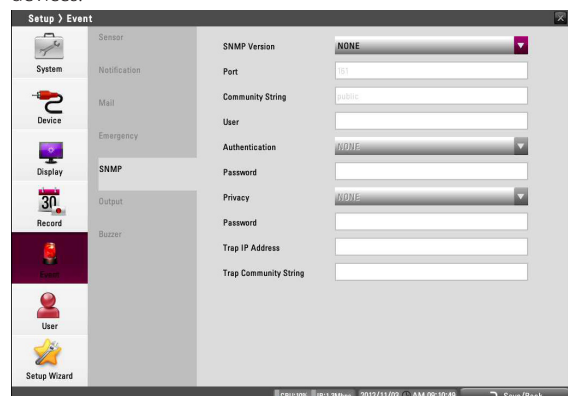

- SNMP Version: Selects a SNMP version if SNMP is allowed to access to this device.
- Port: Enter the number for SNMP port.
- Community String (V2 only): Specifies the SNMP management community in which you want to enable this system (e.g. lgcommunity or public).
- User (V3 only): Enter the security name for the SNMP.
- Authentication (V3 only): Select a mode for the SNMP Authentication. (MD5 or SHA)
- Password (V3 only): Enter the password for the SNMP Authentication.
- Privacy (V3 only): Select a privacy mode for the SNMP Authentication. (DES or AES)
- Password (V3 only): Enter the password for the privacy mode.
- Trap IP Address: Specifies the IP address of the computer you intend to use as your network management station and to which SNMP traps will be sent.

- Trap Community String: Specifies the SNMP trap community in which you want to enable this system (e.g. lgcommunity or public).


Output

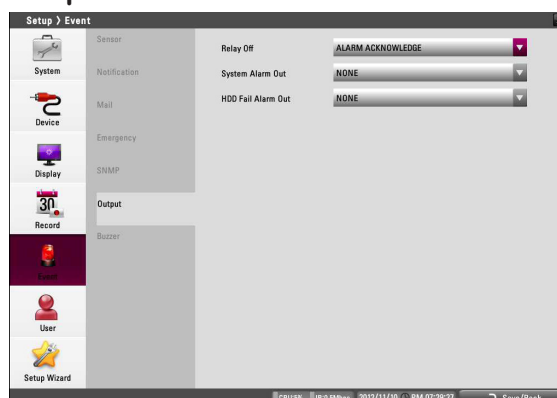

- Relay Off
 - ALARM ACKNOWLEDGE: Use the ALM.OFF button to stop alarm.
 - POST-ALARM TIME: The alarm is stopped after post-alarm time.
- System Alarm Out: Outputs the alarm (relay) signal via the selected alarm out terminal number when the system has some problem. If you do not use this function, select [NONE] option.
- HDD Fail Alarm Out: Outputs the alarm (relay) signal via the selected alarm out terminal number when the HDD is failed. If you do not use this function, select [NONE] option.

Buzzer

Marks up when you want to activate the selected option.

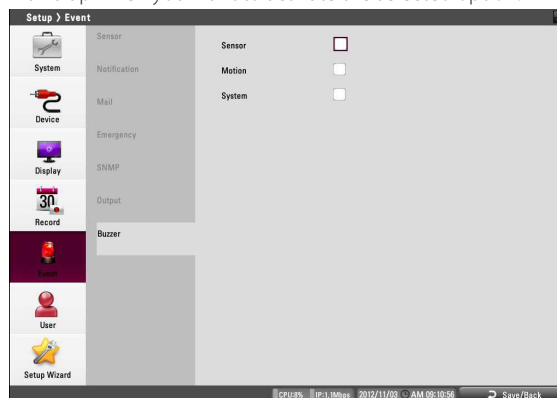

- Sensor: Makes a sound when a sensor occurs.
- Motion : Makes a sound when a motion is detected.
- System: Makes a sound when a cooling fan is not activated or the HDD has bad sector.


! NOTE

- Data cannot be saved in HDD which is occurred bad sector. But if HDD is installed more than 2 on this unit, data is saved in other normal HDD.
- When HDD has bad hold, can not operate normally. Replace the HDD immediately .

User settings

Group Authority

You can register a new user group with various access rights.

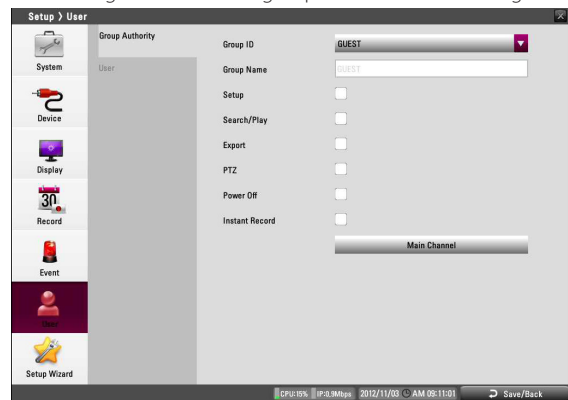

- Group ID: Select the group ID to assign authority.
 - GUEST: The GUEST group has the limited authority of the system. Users in this group are available to see the live image and to set the covert function of the channel.
 - ADMINISTRATOR: The ADMINISTRATOR group has the unlimited authority of the system. Users in this group are available to use all of the functions.
 - [Group 01] to [Group 08]: Users in this group are available to set the authority of the function manually.


! NOTE

The GUEST and ADMINISTRATOR group are set initially for the authority. You cannot change the initial settings and group name (GUEST and ADMINISTRATOR).

- Group Name: If you select one of the group numbers from the Group ID option, you can register the group name. Enter the group name.
 - Setup, Search/Play, Export, PTZ, Power Off, Instant Record: Set the authority for the selected group. Mark up the option to activate it.
- Main Channel: Selects the channel to allow the operation for the group user. The LG logo is displayed on the covert channel(s).

User

You can set the user name for the selected User ID.

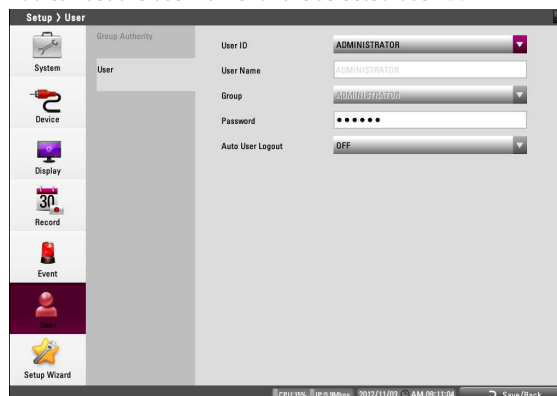

1. Select [User ID] from the drop-down list.
2. Enter the user name of the selected user ID.
3. Select the user group from the drop-down list.
4. Enter the Password.
5. Select the auto user logout time from the drop-down list.
6. Press BACK button to display the confirmation window.
7. Select [OK] to save the setting or [Cancel] to cancel the setting.

! NOTE


- It is strongly recommended that you change the password of the administrator for the protection of the security of personal information. Do not leave 000000 as the default password. Make sure that you keep your password and write it down in a safe place so that you do not forget it.
- If you set the user ID to [ADMINISTRATOR], you cannot change the [User Name] and [Group] option but you can change the password.
- The user name and password are case-sensitive.
- The password must be entered more than 4 characters.

Setup Wizard settings

The Setup Wizard appears on the screen when you turn on the unit for the first time or select [Setup Wizard] on the Setup menu. You can set the system name, display language, date, time, network settings, recording schedule and recording mode on the initial setup wizard.


NOTE

If you run the Setup Wizard when system setup has already been completed, the data previously configured could be deleted.

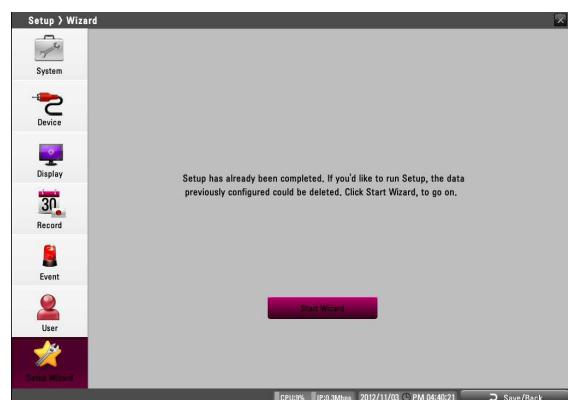

Step 1


Set system name and display language.

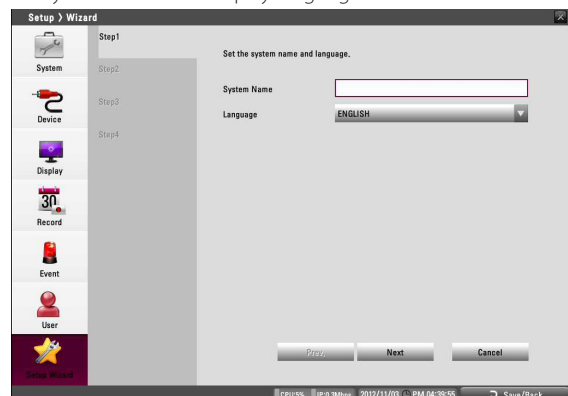

- System Name: Enter the system name by using alphabetic letter, numeric digit and symbols up to 21 characters. The number of maximum characters is depends on the language.
- Language: Select a language for the setup menu and information display.

Step 2


Set date and time.

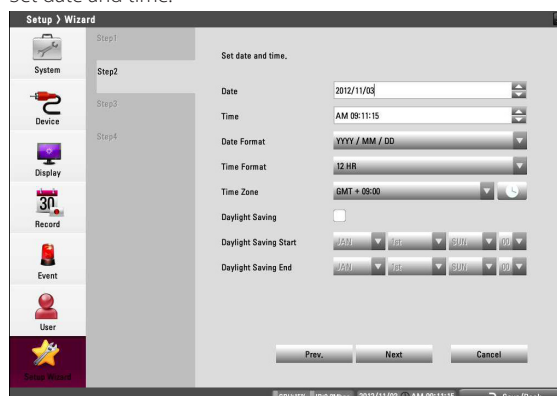

- Date: Select the current year, month and day.
- Time: Select the current time.
- Date Format: Select the date display format.
- Time Format: Select the time display format.
- Time Zone: Select the time zone in the area where the system is installed.
- Daylight Saving: Mark up when you use the daylight saving function.
- Daylight Saving Start: Select the Daylight Saving start time.
- Daylight Saving End: Select the Daylight Saving end time.

Step 3


Set network address for LAN ports.

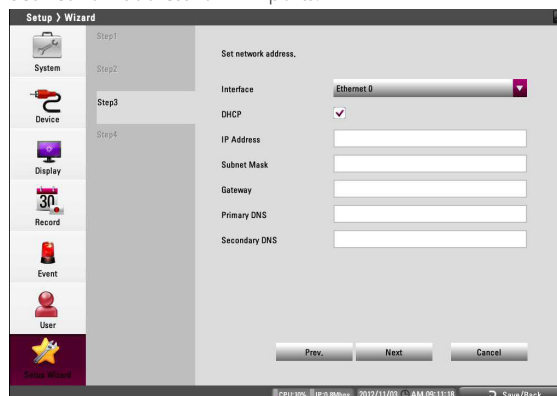

- Interface: Select a LAN port you want to use (Ethernet 0 or Ethernet 1).
- DHCP: Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
- IP Address: Enter the IP address.
- Subnet Mask: Enter the subnet mask address.
- Gateway: Enter the gateway address.
- Primary DNS: Enter the Primary domain name server that translates the hostnames into IP address.
- Secondary DNS : Enter the Secondary DNS server address that backups the Primary DNS.

Step 4

Set recording schedule.

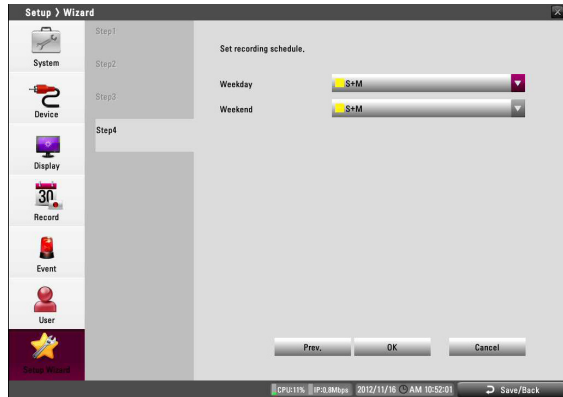

- Weekday: Sets the recording mode to weekday (Mon-Fri).
- Weekend: Sets the recording mode to weekend (Sat-Sun).

4


Operation

Instant Recording

Images from a camera will be recorded on the built-in hard disk. Ensure all the cameras are connected and that time and date have been set correctly.

Before you start recording, first check the repeat recording settings in the recording menu of the system setup, and then make the recording settings.

1. Press the REC button and then press the channel button you want to record. The recording type indicator turns gold on the selected channel screen of the monitor.

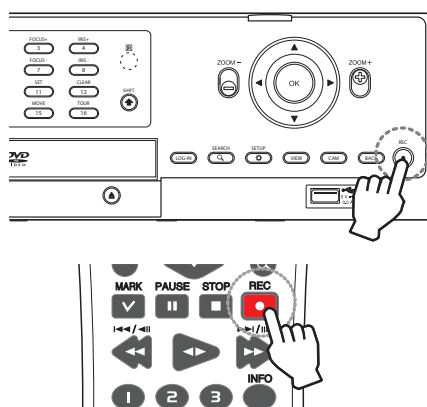

2. Press the REC button and then press the channel button you want to stop recording. If you stop instant recording, the recording mode will be changed into the scheduled recording mode (Continuous/ Sensor / Motion records). If the schedule is not set, the recording type indicator turns gray on the selected channel screen of the main monitor.

! NOTE

- External recording devices can be used as copy areas for images recorded on the hard disk. It is able to record images on the external recording devices directly.
- You can record instantly with the left mouse button.
 1. Move the cursor to the desired channel screen on the main monitor.
 2. Click the recording type indicator with the left mouse button and recording starts. Click it once again and the instant record stops and the recording type indicator will be changed into the scheduled recording mode (Continuous / Sensor / Motion record). If the schedule is not set, the recording type indicator turns gray.
- You can use the instant recording also for the channels scheduled such as sensor, motion or continuous.
- Once you stop instant recording, the recording type indicator will be changed to the scheduled recording mode.
- You can not record the Instant and Continuous recording in following conditions.
 - A HDD is not attached.
 - A HDD is not formatted.
 - The channel has no video input for display.
 - Overwrite is set to "OFF".
 - The schedule (Sensor/Motion) record is not set.
- Priority of record.
Instant record > Sensor record > Motion record > Continuous record.
- The Warning message is displayed when the HDD problem occurs during the recording.

Panic Recording

You can record the all channels at the same time.

This function is activated for a live channel only.

1. Press and hold the REC button until the Recording Type indicator turns gold on the all live channel screens. The system will start recording.
2. Press and hold the REC button until the Recording Type indicator turns gray on the all live channel screens. The system will stop recording.

Instant Playback

It is possible to play a recorded image without stopping recording.


1. Select a channel you want to playback.
2. Press ◀▶ (Play) button to play a recorded image of the previous 1 or 2 minutes of recording. The playback image will be displayed on the full screen window.
3. Press ■ (STOP) button to stop the playback.


Search and Playback


The various search functions of this unit can be used to go to the beginning of the desired picture. Press SEARCH to display the search menu.

Date and Time Search


Use to search recorded pictures by specifying date, hour and minute.

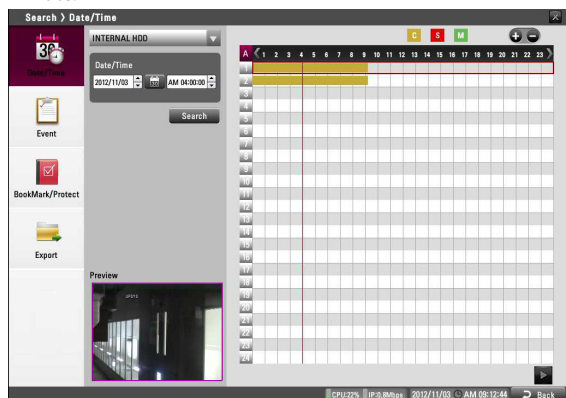

1. Press SEARCH or click the  icon on the System Control Bar and [Search] menu appears.
2. Use ▲/▼ button to select the [Date/Time] icon then press OK.
3. Select the desired source device.
 - INTERNAL HDD: Plays back or searches recorded contents of the internal HDD device.
 - Source Device: Plays back or searches backup contents of the source device.
4. Set the year, month, date and time.
 - ◀/▶: Moves to the previous or next column.
 - ▲/▼: Changes the value at the current position.
 - OK: Selects the column or confirms the setting.
5. Select the [Search] icon then press OK. The search result is displayed.
6. Use ▲/▼ button to select the channel and press OK. Repeat this step to select the other channels.

7. Press ◀▶ (Play) button or click  button to start playback. The picture(s) is (are) displayed on the main monitor.
8. Press STOP (■) to stop playback and return to the search menu.
9. Press BACK repeatedly to exit the [Date/Time] menu.

Using the calendar icon to select a date


1. Select the  icon then press OK.
2. Press BACK to move to the [▲] or [▼] option selecting a year and a month.
3. Press OK repeatedly to select a desired year and month.
4. Use ▲/▼/◀/▶ to select a date then press OK.
5. Select [OK] button and press OK to confirm the settings.


NOTE

- While the backup is in progress, you can not search the data on the backup device.
- Do not remove the external USB device from the USB device whilst the backup search is in progress. It may cause a malfunction.
- Recorded data shown on the time graph will be displayed in different colors depending on the recording type.
 - Gold: Continuous recording.
 - Red: Sensor recording.
 - Green: Motion-detection recording.
- Use + - button to view the detailed time by 6 hour intervals.
- If you do not select the channels in the Date/Time search, playback is implemented as current main monitor screen mode.

Event Search

Search a recorded picture by date and type of event.

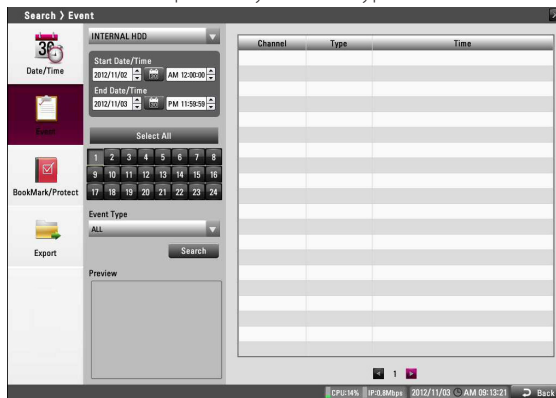


1. Press SEARCH or click the  icon on the System Control Bar and [Search] menu appears.
2. Use ▲/▼ button to select the [Event] icon then press OK.
3. Select the desired source device.
4. Set the year, month, date and time.
 - ◀/▶: Moves to the previous or next column.
 - ▲/▼: Changes the value at the current position.
 - OK: Selects the column or confirms the setting.

- Use ▲/▼/◀/▶ button to select the channel and press OK button to confirm the selection. If you want to select the all channels, marks up the [Select All] option.
- Select the [Event Type] from the drop-down list.
- Select the [Search] button then press OK.
The event list menu appears.
You can see the images through preview screen if you select a data in Event list.
- Select a recording data on the event list then press ◀▶ (Play) button or click ▶ button to play back the selected data.
The picture is displayed on the main monitor.
- Press STOP (■) to stop playback and return to the event list menu.
- Press BACK repeatedly to exit the event search menu.

Bookmark/Protect Search

Searches the recorded data included a bookmark or the protected section.

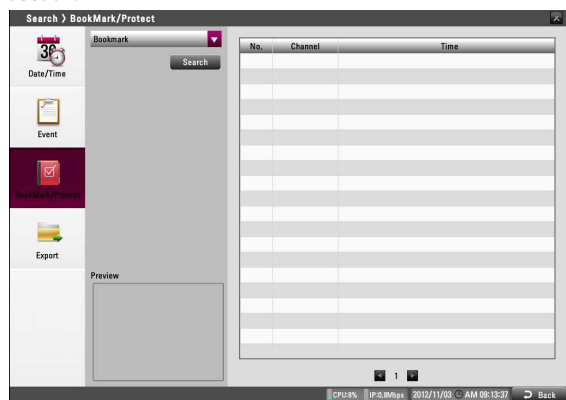

- Press SEARCH or click 🔍 icon on the System Control Bar and [Search] menu appears.
- Select the [Bookmark] or [Protect] from drop-down list.
- Select the [Search] icon then press OK. The Bookmark (or Protect) list appears.
- Use ▲/▼ button to select a bookmark (or protect) then press OK.
- Press ◀▶ (Play) or click ▶ button to play back the selected data.

NOTE


- Backup data cannot be played back by a Bookmark/Protect Search.
- If you want to delete the bookmark/protect on the list, select the recording data and select ✕ button and press OK.

Export Search

Searches an exported data in the external device or internal DVD-ROM device.

If you want to use this function, you have to connect the external device or insert the CD/DVD disc with exported data otherwise the warning message will be displayed.

Check the export device before you proceed.

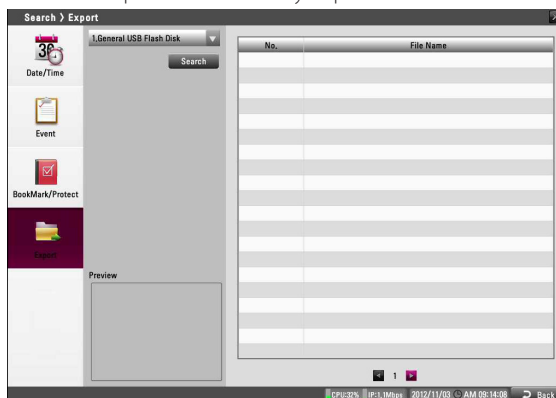

























- Press SEARCH or click 🔍 icon on the System Control Bar and [Search] menu appears.
- Use ▲/▼ button to select the [Export] icon then press OK.
- Select the desired source device.
- Select the [Search] icon then press OK.
The exported file list menu appears.
- Select the exported file on the exported file list then press ◀▶ (Play) button or click ▶ to start playback.
The picture is displayed on the main monitor.
- Press STOP (■) to stop playback and return to the exported file list menu.

NOTE

The exported data with password cannot preview the image.
When you play the exported data with password, logon screen appears. To unlock the data, enter the password.

Functions Available During Playback

Button			Function
Playback Control Menu	Remote Control	Front panel	
	STOP 		Stops playback.
	PAUSE 		Pauses playback.
			Jumps to the beginning of the current data recorded on the same date. (press the button for more than 2 seconds.)
			Jump to the last 1 minute of the current data recorded on the same date. (press the button for more than 2 seconds.)
			Press repeatedly to select the required scan speed. (▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶ or ◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀)
	PAUSE 		Press repeatedly to play frame-by-frame in pause mode.
			Press to play reverse or normal playback.
	MARK 	SHIFT + 	Press MARK at a desired point to be marked during playback. Up to 15 points can be marked.



NOTE

- You can play the backup or export data in normal speed only.
- If you use the reverse frame skip function, a frame may be skipped.
- Multi channel play works only in the date/time search function.
- If you double-click the channel during the multiple channel playback, the selected channel will be played on the full screen. And if you double-click the channel during playing in full screen mode, it will return to the previous playback condition.

Using the playback control menu

You can use various playback function using playback control menu.

1. Play a data recorded.
Playback control menu appears at the bottom of the screen.



	Selects the camera you want to play.
	Enlarge the current screen using the digital zoom function.
	Displays the date of the data recorded. You can choose the date you want to see.
	Displays the time of the data recorded. You can choose the time you want to see.
	Displays the record mode.
	Increases or decreases the time interval of the Time Line.
	Registers a bookmark.
	Displays the [Export] menu.
	Displays the [Protect] menu.
	Minimizes the Playback control menu.
	Displays the current position, recording mode and recording section.
	Playback control buttons

! NOTE


The exported data with password cannot preview the image. When you play the exported data with password, logon screen appears. To unlock the data, enter the password.

Using the Protect function

This function allows you to protect the recorded data against being automatically overwritten.

How to select Protect section.

1. Click icon on the Playback control menu.
The [Protect] menu appears.

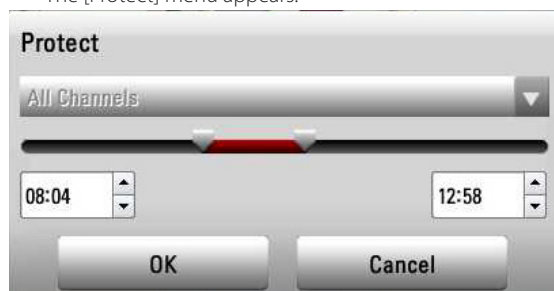

2. If you want to change the time period, select starting and ending point of a part that you want to protect.
3. Click the [OK] icon and the part is protected.
The protected data is shown shaded in the timeline area.

! NOTE

- Protect function does not work when two or more protected parts overlap or when no data does not exist in the selected part.
- The protected section can be released when the time is set in the past or by Auto delete function.

How to release the Protect section.

1. Select any position in the protected section on the Playback control menu.
2. Click the icon.
The confirm message appears.
3. Click the [OK] icon.
The protected data is released.

5

Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptoms	Cause & Solution
The system power does not turn on.	Check the power cable is connected correctly.
	Check the input voltage is correct.
	If the system power does not turn on even if the power cable is connected correctly, please contact the service center.
The system power is turned on but no video data is displayed on the monitor.	Check the monitor power cable is connected properly.
	Make sure the monitor is turned on.
	Unplug the power cable and plug it in again.
The camera numbers are displayed on the screen but the camera images are not displayed.	Check the power cable on the camera is connected correctly.
	Check the LAN cable is connected correctly.
	Check the IP Camera cable is connected correctly.
	Turn off the NVR system and turn it on again.
The camera video is shown on the screen but the system does not record the video.	Check the recording mode in the record setting menu.
	Check the HDD detection status in the System Information window. If the HDD detection status is abnormal, check the HDD formatting and the connection of the HDD.
	Check the recordable disk space in the HDD.
	Check the overwrite option in the setup menu for overwrite recording.
	Check the IP Camera's motion detection feature. To use IP Camera Motion recording, IP Camera's motion detection feature must be activated.
It is impossible to search through the recorded video.	Check if there is recorded video data at the time that you are trying to search on the table.
	If there is no recorded video data, check the recording mode in the record setting menu.
	Check the HDD detection status in the system information window. If the HDD detection status is abnormal, check the HDD formatting and the connection of the HDD.
	Check the user type. The search function is not available for an unauthorized user.

Symptoms	Cause & Solution
Audio data recorded with video data is not playing.	Check the audio recording option is correctly set for the camera you wish to record audio.
	Check the speaker on the rear of system are connected correctly.
	Check the connected speaker is working properly.
The connected sensor is not operating.	Check the type of sensor in the camera setting is the same as with the connected sensor.
	Check the system is set to use the sensor in the recording schedule window in the recording setting menu.
	Check the sensor is properly connected to the ALARM-IN.
The connected PTZ camera is not operating.	Check the user type. The PTZ camera control is not available for a normal user.
An E-mail sent from this product was not received.	E-mail reception failed without SMTP server setting. <ul style="list-style-type: none"> • Make sure the network is correctly set. • Make sure the mail address is input correctly. • Check the spam mail setting of the input mail address. (If you set the spam mail, some mails are deleted automatically or classified in the spam mail box) • Some of SMTP mail services do not support an E-mails from private SMTP servers. In this case use the public SMTP server.
	E-mail reception failed even if the SMTP server was set. <ul style="list-style-type: none"> • When the [Please check the SMTP information or internet cable] message is displayed. <ul style="list-style-type: none"> - Check the SMTP server address. - Check the SMTP port number. (Default setting is 25) - Check the network settings. • When the [Please check the authentication information] message is displayed. <ul style="list-style-type: none"> - Check the user name. - Check the password. • The mail reception failed without error message. <ul style="list-style-type: none"> - Check the receiver's mail address. - Check your E-mail is not classified as a spam mail on the receiver's mail setting.
The remote control does not work properly.	Check the batteries in the remote control.
	Check the ID setting for the remote control. (See the page 28.)

**NOTE****If you observe any of the following symptoms:**

- Some of the front panel LEDs do not light.
- The system does not operate normally.

You can reboot the system as follows:

1. Turn off the system and turn it on again after a few seconds.
2. When the recorder does not work normally after rebooting, contact the service center.

6

Appendix

Recommended Devices

Recommended USB Memory list

No.	Maker	Model Name	Capacity
1	LG Electronics	XTICK SPIN	2 G
2	LG Electronics	XTICK UF1	32 G
3	Lexar	Jump Drive	1 G
4	Memorive	SLC	2 G
5	TRANSCEND	JF	16 G
6	SKYDRV	x2	2 G
7	SANDISK	Cruzer	16 G
8	Samsung Electronics	SUM-LSB8	8 G
9	Samsung Electronics	SUM-PSB	32 G

! NOTE

- Some USB memory devices other than the ones on the above table may not work properly, even if this system reads them.
- For the latest recommended USB list, please visit <http://www.lgecommercial.com>

Recommended External Device list

Device	Capacity	File system	Backup search function for the client program
USB HDD	Up to 2 TB.	FAT 32 (This file system is compatible with Windows and Linux system.)	Yes
E-SATA HDD	Up to 2 TB.	XFS (Linux file system) This file system is not compatible with Windows system.	No

! NOTE

The E-SATA device with the FireLynx Series of Malign Technology is supported only for data storage. Other device or manufacture may cause a malfunction.

Recommended CD/DVD Media list

Maker	CD-R	CD-RW	DVD-R	DVD-RW	DVD+R	DVD+RW
Imation	○	○	○	○	○	○
Memorex	○	○	○	○	○	○
MITSUBISHI	○	○	○	○	○	○
PHILIPS	○	○	○	○	○	○
SONY	○	○	○	○	○	○
Verbatim	○	○	○	○	○	○

! NOTE

8 cm (1.4 GB) Mini CD/DVD and the Dual Layer type media (DVD) are not supported.

Supported function list for device

Device	Instant backup	Schedule backup	Export	Configuration Import/Export
CD/DVD	O	X	O	X
USB memory	O	O	O	O
USB HDD	O	O	O	O
E-SATA HDD	O	O	O	O



NOTE

If you use a USB memory stick or USB HDD for configuration import/export you must disconnect the other external USB devices.

Supported IP Camera Audio/Video Codec

Item	Codec
Video	H.264 Base/Main Profile, JPEG, MPEG4
Audio	G.711, G.726, AAC, PCMU 8 Khz, PCMA 8 Khz

Time zones

Timezone name	Timezone Abbreviation	Timezone	DST
Eniwetok, Kwajalein	EK	-12:00	
Midway Island, Samoa	MIS	-11:00	
Hawaii	HAW	-10:00	
Alaska	ALA	-09:00	-08:00
Pacific Time (US and Canada); Tijuana	PST	-08:00	-07:00
Mountain Time (US and Canada), Chihuahua, La Paz, Mazatlan, Arizona	MST	-07:00	-06:00
Central Time (US and Canada), Saskatchewan, Guadalajara, Mexico City, Monterrey, Central America	CST	-06:00	-05:00
Eastern Time (US and Canada), Indiana (East), Bogota, Lima, Quito	EST	-05:00	-04:00
Atlantic Time (Canada), Caracas, La Paz, Santiago	AST	-04:00	
Newfoundland	NWF	-03:30	-02:30
Brasilia, Buenos Aires, Georgetown, Greenland	BBA	-03:00	
Mid-Atlantic	MAT	-02:00	
Azores, Cape Verde Islands	AZO	-01:00	
Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London, Casablanca, Monrovia	GMT	0	+01:00
Amsterdam, Belgrade, Bratislava, Budapest, Ljubljana, Prague, Sarajevo, Skopje, Warsaw, Zagreb, Brussels, Copenhagen, Madrid, Paris, Berlin, Bern, Rome, Stockholm, Vienna, West Central Africa	AMS	+01:00	+02:00
Athens, Istanbul, Minsk	AIM	+02:00	+03:00
Bucharest, Cairo, Pretoria, Jerusalem, Harare, Pretoria	BCP	+02:00	+03:00
Helsinki, Riga, Israel, Kyiv, Sofia, Tallinn, Vilnius	HRI	+02:00	+03:00
Baghdad, Kuwait, Riyadh, Nairobi	BKR	+03:00	+04:00
Moscow, St.Petersburg, Volgograd	MSV	+03:00	+04:00
Tehran	THE	+03:30	+04:30
Abu Dhabi, Muscat, Baku, Tbilisi, Yerevan	ABT	+04:00	
Kabul	KAB	+04:30	
Ekaterinburg, Islamabad, Karachi, Tashkent	EIK	+05:00	
Bombay, Calcutta, Madras, New Delhi, Chennai, Kolkata	BCD	+05:30	
Almaty, Dhaka, Colombo, Astana, Sri Jayawardenepura, Novosibirsk	ADC	+06:00	
Yangon	MMT	+06:30	
Bangkok, Hanoi, Jakarta, Krasnoyarsk	BHJ	+07:00	
Beijing, Changqing, Hong Kong, Urumqi	BHU	+08:00	
Perth, Singapore, Taipei, Beijing, Chongqing, Hong Kong SAR, Urumqi, Kuala Lumpur, Irkutsk, Ulaan Bataar	SST	+08:00	
Osaka, Sapporo, Tokyo	OST	+09:00	
Seoul, Yakutsk	SYA	+09:00	
Adelaide, Darwin	ADA	+09:30	
Brisbane, Guam, Port Moresby	BGP	+10:00	
Canberra, Melbourne, Sydney	CMS	+10:00	
Hobart, Vladivostok	HVL	+10:00	
Magadan, Solomon Islands, New Caledonia	MSN	+11:00	+12:00
Auckland, Wellington	AWE	+12:00	
Fiji Islands, Kamchatka, Marshall Islands	FKM	+12:00	

Factory Default Configuration Settings

1st level	2nd level	3rd level	Default Value	Factory Default setting
System	Properties	System Name	NULL	YES
		Language	The option depends on the model.	YES
		Button Beep	OFF	YES
		Resolution	1024*768	NO
		Configuration Import	-	-
		Configuration Export	-	-
		Factory Default	-	-
	TCP/IP4	Interface	Ethernet0	-
		DHCP	ON	YES
		IP Address	NULL	YES
		Subnet Mask	NULL	YES
		Gateway	NULL	YES
		Primary DNS	NULL	YES
		Secondary DNS	NULL	YES
	TCP/IP6	Interface	Ethernet0	-
		Auto	ON	YES
		IP Address	NULL	YES
		Subnet Prefix Length	64	YES
		Gateway	NULL	YES
		Primary DNS	NULL	YES
		Secondary DNS	NULL	YES
	Network	TCP/IP Port No.	9001	YES
		Web Server Port No.	80	YES
		Audio Port No.	9003	YES
		Bandwidth Throttle	ALL / 100 Mbps	YES
		RTSP Port	554	YES
		DDNS Service	OFF	YES
		Host Name	NULL	YES
		Registerd Host	NULL	YES
		Update	-	-
	Network Streaming	CH	-	-
		Profile	Profile1	YES

System	Date/Time	Date	Current Date	NO
		Time	Current Time	NO
		Date Format	YYYY/MM/DD	YES
		Time Format	12 HR	YES
		Time Zone	The option depends on the model.	NO
		Daylight Saving	OFF	NO
		Daylight Saving Start	JAN, 1st, SUN, 00	NO
		Daylight Saving End	JAN, 1st, SUN, 00	NO
	NTP	NTP	OFF	YES
		Time Server	PUBLIC SERVER	YES
		Private Time Server	NULL	YES
		Sync. Interval	1 DAY	YES
		NTP Test	-	-
	Controller	IR Remote ID	1	YES
		Remote Controller ID	NONE	YES
	Update	Method	LOCAL	YES
		Device	-	YES
		FTP Server	-	YES
		Search	-	-
		No.	-	-
		File Name	NULL	-
		Update	-	-
		Check now for update	-	-
	Backup	Schedule	OFF	YES
		Device	-	YES
		Schedule Start	SUN, 12:00:00 AM	YES
		Time Range Date	Current Date	YES
		Time Range Start	SUN, 00:00	YES
		Time Range End	SUN, 00:00	YES
		Overwrite	ON	YES
		Estimate Size	-	-
		Start Backup	-	-
		Erase Media	-	-

Device	IP Device	CH	CH 01	-
		Name	CH 01 to CH 24	YES
		Model Name	NONE	YES
		MAC	NULL	YES
		IP	NULL	YES
		HTTP Port	80	YES
		Driver	NULL	
		Profile1	NULL	
		Profile2	NULL	
		RTSP Port	554	YES
		RTP Mode	UDP	YES
		Stream	NULL	YES
		Audio Recording	OFF	YES
		Setup	-	-
		Delete	-	-
		Auto	-	-
		Manual	-	-
	Storage	Overwrite	ON	YES
		Full Warning	OFF	YES
		Auto Delete	OFF	YES
		Storage Saving	OFF	NO
		Format	-	-
		E-SATA	-	-
		Insert	-	-
		Eject	-	-
Display	OSD	Channel Name	ON	YES
		Channel Status	ON	YES
		Channel FPS	OFF	YES
		Font Size	12	YES
		Position	TOP	YES
	Sequence	Main Dwell Time	5 SEC	YES

Record	Normal Schedule	Day	Current day of the week	NO
		Mode	C+S+M	NO
		Channel Copy	-	-
		Day Copy	-	-
	Special Schedule	List	Item 1	YES
		Name	NULL	YES
		Date	--/--	YES
		Mode	C+S+M	NO
		Delete	-	-
		Channel Copy	-	-
	Sensor	CH	-	-
		Prealarm	10 SEC	YES
		Postalarm	10 SEC	YES
	Motion	CH	-	-
		Prealarm	10 SEC	YES
		Postalarm	10 SEC	YES
Event	Sensor	In	-	YES
		Sensor Type	N.O	YES
		Camera	01 to 16	YES
		Relay Output	NONE	YES
		Preset	NONE	YES
	Notification	Sensor On	OFF	YES
		Motion Detection	OFF	YES
		Admin Password Changed	OFF	YES
		Power On/Off	OFF	YES
		Disk Full	OFF	YES

Event	Mail	Notification	OFF	YES
		SMTP Server	NULL	YES
		SMTP Port	25	YES
		User Name	NULL	YES
		Password	NULL	YES
		TLS	OFF	YES
		Mail Address 1	NULL	YES
		Mail Address 2	NULL	YES
		Mail Address 3	NULL	YES
		Sender	NULL	YES
		JPEG Attachment	OFF	YES
		E-mail Test	-	-
	Emergency	Notification	OFF	YES
		Host Name	NULL	YES
		Port	9002	YES
	SNMP	SNMP Version	NONE	YES
		Port	161	YES
		Community String	public	YES
		User	NULL	YES
		Authentication	NONE	YES
		Password	NULL	YES
		Privacy	NONE	YES
		Password	NULL	YES
		Trap IP Address	NULL	YES
		Trap Community String	NULL	YES
	Output	Relay Off	ALARM ACKNOWLEDGE	YES
		System Alarm Out	NONE	YES
		HDD Fail Alarm Out	NONE	YES
	Buzzer	Sensor	OFF	YES
		Motion	OFF	YES
		System	OFF	YES

User	Group Authority	Group ID	GUEST	YES
		Group Name	GUEST	YES
		Setup	OFF	YES
		Search/Play	OFF	YES
		Export	OFF	YES
		PTZ	OFF	YES
		Power Off	OFF	YES
		Instant Record	OFF	YES
		Main Channel	All Enable	YES
	User	User ID	ADMINISTRATOR	YES
		User Name	ADMINISTRATOR	YES
		Group	ADMINISTRATOR	YES
		Password	"000000"	YES
		Auto User Logout	OFF	YES

IP Live/Playback Specifications

Calculation formula: Total Available FPS for new resolution = $(704 \times 480) \times (30 \times 24) / (\text{Width} \times \text{Height})$

IP Camera Live/Playback Display. (Codec: H.264)		
Model	LRN8240	
IP Live/Playback	IP Cameras	Total FPS
	FPS(up to)	(up to)
D1	30fps x 24ch	720
720P(1M Pixel)	30fps x 8ch	240
720P(1M Pixel)	15fps x 16ch	240
1.3M Pixel	30fps x 7ch	210
1080P(2M Pixel)	30fps x 4ch	120
3M Pixel	20fps x 4ch	80
Over channel & resolution	1	24(I-Frame Only)

Specifications

Model			LRN8240D Series
Video	Input	IP	24ch @ 4 CIF (320 x 240 ~3 Mega-pixel)
	Output	VGA	1
		HDMI	1
Audio	IP Camera Audio Input		Maximum 24
	Output		2 (Local, Two way)
Alarm	Input		16
	Output		4
	Notification	Buzzer	Support
		e-mail	Support
		Remote S/W (Client S/W, VMS)	Support
		Emergency S/W	Support
Search	Playback Speed	FF/ Reverse	4 Steps (1x - 16x)
		Frame Advance	Forward / Backward
	Screen Division		Full, 4, 9, 16, 25
	Search Mode		Date/Time, Event, Export, Protect, Bookmark
Display	Display Speed		Up to 720 IPS @ 4 CIF
	Division Mode		Full, 4, 9, 16, 1+5, 1+7, 1+16, 25
Storage	Internal HDD	Max Capacity	12 TB (Up to 6 HDDs)
	External HDD	Interface Type	E-SATA
Backup	Backup Interface		USB 2.0 (x3), Network, Internal ODD, e-SATA,

Network	Network Connection	Ethernet 10/100/1000 Mbps (x2)
	Bandwidth Control	Yes
Power		AC Free 100~240V, 50/60 Hz
Power Consumption		Maximum 80 W (with 6 HDD)
Dimension (W x D x H)		440 mm x 452 mm x 115 mm
Net Weight (without HDD)		9.45 kg
Net Weight (with 6 HDD)		13.15 kg
Operating Temperature / Humidity		0 °C to 40 °C / 0 % RH to 80 % RH

**NOTE**

Design and specifications are subject to change without notice.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

